

# **Excavator WX90**

## **Service Manual**

**Cre 9-35990**

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

---

**INTRODUCTION WX90**


---

**TO THE READER**

- This manual has been written for a skilled technician, in order to give him the information necessary to repair this machine.
- Read this manual carefully for correct information about repair procedures.
- For any question or comment, or in case

**you notice a mistake in this manual content, please contact:**

CASE FRANCE S.A.  
18, place des Nymphéas  
ZI Paris Nord II - 93420 Villepinte  
FRANCE

---

**ADDITIONAL REFERENCE MANUALS**

- In addition to this Workshop Manual, refer also to the following:
  - Operation and maintenance instruction manual
  - Spare parts catalog

---

**DESCRIPTION OF THE COMPLETE WORKSHOP MANUAL**

- The complete repair manual consists of one volume:
 

**WX90 - Workshop Manual "Excavator"**
- "Excavator" Workshop Manual contains the technical information necessary for machine/ engine service and repair, service equipment, information on maintenance standards, remove

and install procedures, disassembly and assembly procedures.

- The complete Workshop Manual for the excavator model 9-35990 consists of the following volume identified by print number as shown herebelow:

VOLUME	MACHINE TYPE	PRINT No.
Workshop Manual - "Excavator"	WX90	9-35990

## AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognising the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

Carefully read indications, cautions and safety warning quoted in the "SAFETY RULES" section.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

**Never attempt to clean, oil or adjust a machine while it is in motion.**



### ATTENTION

**On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.**

---

**COPYRIGHT BY CASE FRANCE SA**

**18, place des Nymphéas ZI Paris Nord II - 93420 Villepinte France**

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

# WX90



SECTION 1

HOW TO USE

## INDEX

Group 1 - SECTIONS AND GROUPS INDEXES ..... HU1-1-1








Group 2 - INTRODUCTION ..... HU1-2-1

- 2.1 Introduction
- 2.2 Manual handling
- 2.3 Symbols and indications

Group 3 - FEATURES OF THE MANUAL ..... HU1-3-1

- 3.1 Manual composition
- 3.2 Brief information for manual consultation



1.	SECTIONS AND GROUPS INDEXES	PAGE
	<b>SECTION 1 - HOW TO USE</b> Group 1 - SECTIONS AND GROUPS INDEXES ..... HU1-1 Group 2 - INTRODUCTION ..... HU1-2 Group 3 - FEATURES OF THE MANUAL ..... HU1-3	
	<b>SECTION 2 - SAFETY RULES</b> Group 1 - GENERAL INFORMATION ..... SR2-1 Group 2 - SAFETY RULES ..... SR2-2 Group 3 - SAFETY DECALS ..... SR2-3	
	<b>SECTION 3 - SPECIFICATION</b> Group 1 - GENERALITY ..... SP3-1 Group 2 - TECHNICAL SPECIFICATIONS ..... SP3-2 Group 3 - LUBRICANTS AND SPECIFICATIONS ..... SP3-3	
	<b>SECTION 4 - SUPERSTRUCTURE</b> Group 1 - SUPERSTRUCTURE ..... SS4-1 Group 1A - FLEXIBLE HOSES AND CONNECTIONS ..... SS4-1A Group 2 - HYDRAULIC PUMPS ..... HYP4-2 Group 3 - CONTROL VALVE ..... CV4-3 Group 4 - SWING DEVICE ..... SRD4-4 Group 5 - PILOT VALVES ..... PV4-5 Group 6 - CENTER JOINT ..... CJ4-6 Group 7 - STEERING VALVE ..... SV4-7 Group 8 - BRAKE PEDAL VALVE ..... BRV4-8 Group 9 - ACCUMULATORS ..... ACC4-9 Group 10 - SOLENOID VALVES ..... SOV4-10	
	<b>SECTION 5 - UNDERCARRIAGE</b> Group 1 - UNDERCARRIAGE ..... UC5-1 Group 2 - TRAVEL HYDRAULIC MOTOR ..... HYP4-2 Group 3 - TRANSMISSION ..... CV4-3 Group 4 - AXLES ..... AX5-4 Group 5 - TRANSMISSION SHAFT ..... TS5-5	
	<b>SECTION 6 - FRONT-END ATTACHMENT</b> Group 1 - FRONT-END ATTACHMENT ..... FA6-1 Group 2 - HYDRAULIC CYLINDERS ..... CY6-2 Group 3 - PINS AND BUSHINGS ..... FA6-3	
	<b>SECTION 7 - HYDRAULIC SYSTEM</b> Group 1 - GENERALITIES ..... HS7-1 Group 2 - MAIN HYDRAULIC SYSTEM ..... HS7-2 Group 3 - PILOT/BRAKES SYSTEM ..... HS7-3 Group 4 - STEERING SYSTEM ..... HS7-4 Group 5 - BRAKES SYSTEM ..... HS7-5 Group 6 - OPERATION OF CIRCUITS ..... HS7-6 Group 7 - TRAVEL CIRCUIT ..... HS7-7 Group 8 - HYDRAULIC SYSTEM DIAGRAM ..... HS7-8	

---

**SECTIONS AND GROUPS INDEXES WX90**


---

**SECTION 8 - ELECTRICAL SYSTEM**

Group 1 - SAFETY RULES .....	ES8-1-1
Group 2 - SPECIFICATIONS AND DATA .....	ES8-2-1
Group 3 - LOCATION AND FUNCTIONS OF COMPONENTS .....	ES8-3-1
Group 4 - ARRANGEMENTS AND OPERATION .....	ES8-4-1
Group 5 - ELECTRICAL SYSTEM GENERALITIES .....	ES8-5-1
Group 6 - ELECTRIC COMPONENTS .....	ES8-6-1

**SECTION 9 - TROUBLESHOOTING**

Group 1 - INTRODUCTION .....	TS9-1-1
Group 2 - HYDRAULIC SYSTEM TROUBLESHOOTING .....	TS9-2-1
Group 3 - ELECTRICAL SYSTEM TROUBLESHOOTING .....	TS9-3-1

**SECTION 10 - OPERATIONAL PERFORMANCE TEST**

Group 1 - INTRODUCTION .....	PT10-1
Group 2 - PERFORMANCE STANDARD .....	PT10-2
Group 3 - PREPARATION FOR PERFORMANCE TEST .....	PT10-3
Group 4 - EXCAVATOR PERFORMANCE TEST .....	PT10-4
Group 5 - COMPONENTS PERFORMANCE TEST .....	PT10-5

**SECTION 11 - ENGINE**

Group 10 - GENERAL INFORMATION .....	EM11-10
Group 11 - SPECIFICATION .....	EM11-11
Group 12 - CYLINDER HEAD ASSEMBLY .....	EM11-12
Group 13 - PISTON AND CONNECTION ROD .....	EM11-13
Group 14 - CRANKSHAFT .....	EM11-14
Group 15 - TIMING CASE COVER AND DRIVE .....	EM11-15
Group 16 - GENERAL DESCRIPTION .....	EM11-16
Group 17 - ENGINE TIMING .....	EM11-17
Group 19 - LUBRICATION SYSTEM .....	EM11-19
Group 20 - FUEL SYSTEM .....	EM11-20
Group 21 - COOLING SYSTEM .....	EM11-21
Group 22 - FLYWHEEL AND HOUSING .....	EM11-22
Group 23A - ELECTRICAL EQUIPMENT .....	EM11-23A
Group 23B - ELECTRICAL EQUIPMENT .....	EM11-23B
Group 23C - ELECTRICAL EQUIPMENT .....	EM11-23C
Group 25 - AUXILIARY EQUIPMENT .....	EM11-25



## 2. INTRODUCTION

 
### 2.1 INTRODUCTION

This service manual has been prepared in order to increase repair quality, providing to the technicians the elements for a good knowledge of the product and showing the proper procedures to carry out the maintenance operations. We recommend to thoroughly read the content and follow it when necessary.

It is a concise guide for a specific machine. It covers construction features, operation principle, troubleshooting, disassembly and assembly of components and repair action.

Using this manual in systematic and rational way it is possible to reduce the repairing errors and delay that could cause machine stop with a detriment of cost management.

The information quoted in this service manual are supplied also to be used for training aids. Therefore it is advisable to be used in the training of new personnel that will be employed in the machine maintenance.

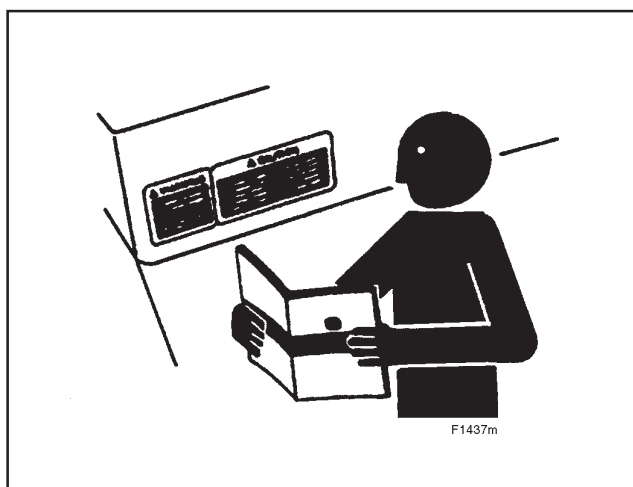

All the information, illustrations and specifications contained in this service manual are based on the latest product information available at the time of publication.

**CASE** reserves the right to makes changes at any time without notice to this service manual for technical or trading reasons.

### 2.2 MANUAL HANDLING

#### 2.2.1 CHANGES AND SUPPLEMENTS

This service manual is carried out in loose-leaf and therefore can be easily kept up-to-date.

The personnel in charge is responsible for updating the manual and will insert the changes or supplements that **CASE** will issue to its service organisation.

## 2.3 SYMBOLS AND INDICATIONS

In this service manual, symbols and indications are used to draw the attention on important points for safety and quality.

### 2.3.1 SAFETY

This safety symbol is used for important safety message. When you see this symbol, be alert to the potential for personal injury. Strictly follow the recommended precautions.



### 2.3.2 INDICATIONS

Reading this service manual you can find indications as “**IMPORTANT**” or “**NOTE**” that have the following meaning:

- **IMPORTANT**  
Indicates a situation which, if not avoided, could caused damages to the machine.
- **NOTE**  
Indicates supplementary technical information or know-how.

### 3. FEATURES OF THE MANUAL

#### 3.1 MANUAL COMPOSITION

This service manual is divided into eleven Sections. The Section names and its contents are as below. To fully use this service manual it is essential to understand how it is organised. Therefore, in order to speed up the searching of wished subject, it is advisable to carefully read this chapter.



##### **SECTION 1 - HOW TO USE**

Begin to read first this Section to know the manual composition. This will help you for subject searching.



##### **SECTION 2 - SAFETY RULES**

Indication on how to avoid dangerous situation during the use and maintenance are given in this Section. Furthermore safety decals and relate indications used on the machine are listed on this Section.



 
##### **SECTION 3 - SPECIFICATION**

This Section quotes the specification and data of the machine.



##### **SECTION 4 - SUPERSTRUCTURE**

This Section contains the information relate to operation principle of the systems, of the assemblies and their components located on the machine upper frame. Furthermore the assembly/disassembly procedures of main devices are quoted.

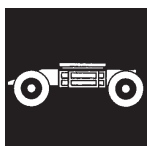

##### **SECTION 5 - UNDERCARRIAGE**

This Section contains the information relate to operation principle of the systems, of the assemblies and their components located on the machine lower frame. Furthermore the assembly/disassembly procedures of main devices are quoted.(axles, transmission, travels motor, etc..).

---

**FEATURES OF THE MANUAL WX90**

---

**SECTION 6 - FRONT-END ATTACHMENT**

This Section describes the front-end attachment and its components and maintenance rules with related disassembly/assembly.

**SECTION 7 - HYDRAULIC SYSTEM**

This Section describes the operation of the machine from hydraulic point of view.

**SECTION 8 - ELECTRICAL SYSTEM**

This Section describes the electric system of the machine, the main electrical component and the connection with the electrical users.

**SECTION 9 - TROUBLESHOOTING**

In this Section information is provided for troubleshooting to the hydraulic and electric systems and the necessary instruction to use the support equipment (test harnesses and test device).

**SECTION 10 - OPERATIONAL PERFORMANCE TEST**

Performance data and the procedures to detect data are provided in this Section.

**SECTION 11 - ENGINE**

This Section contains the necessary information for engine overhaul and repair.

### 3.2 BRIEF INFORMATION FOR MANUAL CONSULTATION

The manual is divided into section, each of them quotes a specific portion of the machine or specific related subject.

Some section (those related to main mechanical assembly) are divided into:

 
- Operation principle **O/P** (Operation Principle)
- Disassembly and assembly **D/A** (Disassembly/Assembly)

In the Operation Principle, the assemblies and their components are described with technical data.

In the disassembly and assembly the procedures are described to perform repair or overhaul, with special tool required and technical data.

Each section is divided into group, and the group, in turn, in pages. Each page has a number, located in the upper right corner. Each number contains the following information;

- **example:**

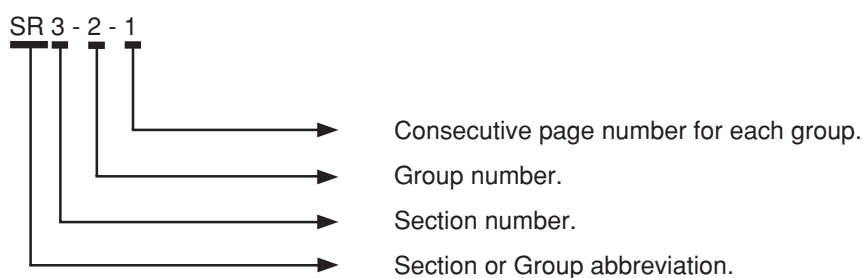

---

**FEATURES OF THE MANUAL WX90**

---

**NOTES:**

# WX90



## SECTION 2

## SAFETY RULES

### INDEX

#### Group 1 - INFORMATION SECTION ..... SR2-1-1

Generalities  
Starting  
Operating  
Stopping

#### Group 1 - Maintenance ..... SR2-1-5

Generalities  
Transfers and transportation  
Engine  
Electrical system  
Hydraulic system  
Tools  
Removing twin wheels

#### Group 2 - SAFETY RULES ..... SR2-2-1

#### Group 3 - SAFETY DECALS ..... SR2-3-1







## SAFETY PRECAUTIONS

SR2-1-1

### GENERALITIES

Read the Operator's Manual carefully before starting, operating, maintaining, fuelling or servicing the machine. Carefully read the explanation to each and all safety signs in the special section of this Manual before starting, operating, maintaining, fuelling or servicing the machine.

Machine-mounted safety plates are colour coded yellow with black borders when they refer to points where special **ATTENTION** must be paid and failure to observe them may cause a serious **DANGER** to the integrity of machine operators. They are white with red borders and black lettering when they refer to a **FORBIDDEN** practice.

It is fundamental that all machine operators know very well the meaning of each safety plate as this considerably decreases operating hazards and accidents.

Do not allow unauthorised personnel to operate or service this machine.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators every time the job requires it. Ask your employer about safety regulations in force and protective equipment.

Always keep the operator's compartment, step plates, grab-rails and handles clean and clear of foreign objects, oil, grease, mud or snow to minimise the danger of slipping or stumbling. Remove mud or grease from your shoes before operating the machine.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and/or grab rails.

Do not use controls or hoses as hand holds. Hoses and controls are movable parts and do not provide solid support. Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Never operate the machine or its attachments from any position other than sitting in the driver's seat. Keep head, body, limbs, hands and feet inside the operator's compartment at all times to reduce exposure to external hazards.

Be careful of possible slippery conditions of the steps and hand rails as well as of the ground around the machine. Wear protective boots or shoes with the soles made of highly no-slip rubber.

Do not leave the machine until it has come to a complete stop.

Always check height, width and weight limitations which may be encountered in the working site and ensure the machine does not exceed them.

Assess exact paths of gas ducts, water mains, telephone lines, sewers, overhead and underground electric lines and all other possible obstacles.

Such paths should be opportunely defined by competent Authorities. If necessary, require that the service is interrupted or said installations are moved prior to starting the work.

You must know the working capacity of the machine.

Define the rear upperstructure swing area and provide for opportune barriers to prevent access into it.

Never exceed machine lifting capacity.

Remain within the limits shown in the loading capacity chart located on the machine.

### STARTING

**Never start or operate a failed machine. Walk all around** the machine before mounting.

Before operating the machine, make sure that any possible dangerous condition has been properly removed. Before starting machine, check that steering and attachment controls are in the neutral position and the safety lever is in the LOCK position. Immediately report any malfunction of parts or systems to the maintenance managers for proper action.

Prior to starting the engine, check, adjust and lock the driver's seat for maximum riding comfort and control accessibility. Prior to operating the machine and/or its attachments, check that bystanders are outside the machine operating range. Sound the horn.

Obey all hand signals, safety indications and signs.

Due to the presence of flammable fluids, never check fuel level, refuel, charge the batteries or use the starting fluid in the presence of smoking materials, open flames or sparks.

Ensure that nobody is within the excavator operating area before starting the machine, swinging the upper structure or moving in any direction.

Adjust all rear-view mirrors for maximum visibility of the area behind the machine.

Ensure that engine speed is appropriate to the job to be carried out.

If any hydraulic control or system exhibits erratic performance or responds abnormally, have the machine checked for air in the system.

Air in these circuits may cause incorrect movements with consequent accident hazard. Refer to the Operator's Manual about corrective action to be taken.

### OPERATING

Do not run the engine of this machine in closed buildings without proper ventilation capable to remove



## SAFETY PRECAUTIONS

SR2-1-2

harmful exhaust gases which concentrate in the air. Keep the operator's compartment free of foreign objects, especially if not firmly secured. Never use the machine to transport objects, unless proper securing points are provided.

**Do not carry riders on the machine.**

Study and familiarise with escape routes alternative to normal exit routes.

For your personal safety, do not climb on or off the machine while it is in motion.

Make sure that bystanders are clear of the machine operating range before starting the engine and operating the attachment. Sound the horn.

Obey all hand signals, safety indications and signs.

When backing, always look to where the machine is to be moved. Be alert of the position of bystanders. Should someone enter the work area, stop the machine.

Maintain a safe distance from other machines or obstacles to ensure required visibility conditions.

Always give way to loaded machines.

Maintain a clear vision of the surroundings of the travel or work area at all times.

Keep cab windows clean and repaired.

When pulling loads or towing through a cable or chain, do not start suddenly at full throttle. Take-up slack carefully.

Avoid kinking or twisting chains or cables.

Carefully inspect cables or chains for flaws or problems before proceeding.

Do not pull through a kinked chain or cable as the high anomalous stresses existing in this condition may induce failures in the kinked portion.

Always wear heavy gloves when handling chains or cables.

Chains and cables should be securely anchored using suitable hooks. Anchor points should be strong enough to withstand the expected load.

Keep everyone clear of anchor points and cables or chains. **Do not pull or tow unless the operator's compartments of the machines involved are properly protected against possible backlash in case of cable or chain failure or detachment.**

Be alert of soft ground conditions close to newly constructed walls. The fill material and machine weight may cause the wall to collapse under the machine.

In darkness, check area of operation carefully before moving in with the machine. Use all lights provided. Do not move into low visibility areas.

If the engine tends to slow down and stall for whatever reason under load or at idle, immediately report this problem to the maintenance managers for proper action. Do not operate the machine until this condition is corrected.

Regularly check all exhaust system components, as exhaust fumes are toxic for the operator.

Operators must know the performance of the

machine they are driving.

When working on slopes or near sudden level drops in the terrain, pay attention not to lose adherence and avoid loose soft ground since overturn or loss of machine control could result.

If noise level is high and exceeds 90 dB(A) over 8 hours at the operator's ear, wear approved ear protection in compliance with local regulations.

Do not operate the machine if you are extremely tired or feel ill.

Be especially careful towards the end of the working shift.

Where removable counterweights are provided, do not operate the machine if they have been removed.

When operating the machine, keep in mind height limits of overhead doors, arches, overhead cables and lines as well as width limits of corridors, roads and narrow passages. Also, get to know load limits of the ground and paving type of the ramps you are to work on.

Beware of fog, smoke or dust that obscure visibility.

Always inspect the working area to identify potential risks such as: inclines, overhangs, trees, demolition rubble, fires, ravines, steep slopes, rough terrain, ditches, crowns, ridge trenches, diggings in traffic areas, crowded parking lots, crowded service areas, fenced zones. In such conditions, proceed with extreme care.

Whenever possible, avoid crossing over obstacles such as very rough terrain, rocks, logs, steps, ditches, railroad tracks. When obstructions must be crossed, do so with extreme care and at a square angle, if possible. Slow down. Ease up to the break-over point, pass the balance point slowly and ease down the other side also using the attachment, if necessary.

To overcome deep trenches or sinking ground, place the machine perpendicular to the obstacle, drastically reduce ground speed and start crossing using also the attachment if necessary, only after assessing that ground conditions allow the traverse safely and without risks.

The gradient you may attempt to overcome is limited by factors such as ground conditions, load being handled, machine type and speed, and visibility.

There is no substitute for good judgement and experience when working on slopes.

Avoid operating the attachment too close to an overhang or high wall, either above or below the machine. Beware of caving edges, falling objects and landslides. Remember that such hazards are likely to be concealed by bushes, undergrowth and such.

Avoid faggots, bushes, logs and rocks. Never drive over them, nor over any other surface irregularities that discontinue adherence or traction with the ground, especially near slopes or drop-offs.

Be alert to avoid changes in adherence conditions that could cause loss of control. **Work with extreme care** on ice or frozen ground and on stepped slopes



## SAFETY PRECAUTIONS

SR2-1-3

or near drop-offs.

The word “bulldozing” generally refers to work in virgin rough terrain, characterised by the presence of all the perils and risks listed above. We emphasise the danger represented in these conditions by large tree limbs (possibly falling on the machine) and large roots (which may act as a leverage under the machine when up-rooted and cause the unit to overturn).

Position the machine dependent upon the loading and unloading areas in order to swing leftwards to load to obtain best visibility.

**Never use the bucket or attachment as a man lift or carry riders.**

Never use the machine as a work platform or scaffolding. The machine must not be improperly used for works not consistent with its features (such as pushing railway cars, trucks or other machines). Always pay attention to people within the machine operating range.

Never move or stop the bucket, other loads or the attachment above ground personnel or truck cabs.

Ensure the truck driver is in a safe place before loading the truck.

Load trucks from side or rear.

Use only the type of bucket recommended considering machine type, materials to be handled, material piling up and loading characteristics, ground type and other typical conditions of the work to be performed.

When travelling with a loaded bucket, keep it as rolled-back as possible. Keep boom and dipper as low as possible.

Ground speed should be adequate to the load and ground conditions.

The load must always be properly arranged in the bucket; move with extreme care when transporting oversize loads.

Do not lift and move the bucket overhead where persons are standing or working, nor downhill when working on a slope as this would decrease machine stability. Load the bucket from the uphill side.

Loads to be raised using the machine should be exclusively hooked to the hitch specially provided.

The excavator is no lifting and transportation means, therefore it should not be used to position loads accurately. Should it be exceptionally used to lift and lay building components, special caution must be taken as follows:

- The machine should necessarily be equipped with the special option supplied by **CASE**. Follow also safety rules for the excavator used as lifting means.
- Secure the loads to be raised using cables or chains fastened with appropriate hooking mechanisms.
- Nobody should be allowed to remain under the raised load or within the excavator operating range for any reason whatever.

Never exceed specified loading capacity. Incorrect fastening of slings or chains may cause boom/dipper failure or failure of the lifting means with consequent bodily injuries and even death.

Always ensure that slings and chains used for lifting are adequate to the load and in good condition.

**All loading capacities are referred to the machine on a level surface and should be disregarded when working on a slope.**

Avoid travelling across slopes. Proceed from uphill downhill and vice-versa. If machine starts slipping sideways when on a slope, lower the bucket and thrust bucket teeth into the ground.

Working on slopes is dangerous. Grade the working area if possible. Reduce work cycle time if it is not possible to grade the working area.

Do not move full bucket or a load from uphill downhill as this would reduce machine stability. Do not work with the bucket turned to the uphill side.

Do not work with the bucket turned uphill as counterweights protruding downhill would reduce machine stability on the slope and increase risk of overturning.

We recommend to work on slopes with the bucket downhill, after checking machine stability with the bucket empty and attachment retracted, by slowly swinging the upperstructure by 360°.

Position the carriage at a right angle relative to slopes, hanging walls, etc. to exit the working area easily.

Be aware when the upperstructure is turned by 180°, steering and travel controls are reversed.

Properly judge ground conditions with particular attention to consistency of the area you are going to work on.

Keep the machine sufficiently far from the ditch edge. Never dig under the machine.

Should it be necessary to dig under the machine, always ensure that digging walls are opportunely propped up against landslide to prevent the machine from falling into the trench.

Do not swing the upperstructure, raise the load or brake abruptly if not required. This may cause accidents.

Prior to beginning the work near gas distribution mains or other public utilities:

- Contact the company owner of the gas mains or its nearest branch before starting the work. Look up the number in the telephone directory.
- Define together which precautions should be taken to guarantee work safety.
- Decrease work speed. Reaction time could be too slow and distance evaluation wrong.
- When working near gas mains or other public utilities installations, appoint a person in charge of signalling duties. This person will have the responsibility of observing the machine, any part of it and/or the load approaching the gas mains from a



## SAFETY PRECAUTIONS

SR2-1-4

standpoint more favourable than the Operator's. This signal man (flag-man) must be in direct communication with the Operator and the Operator must pay undivided attention to the signals supplied.

- The gas distributing Company, if previously advised and involved in the work, as well as machine Operator, Owner and/or any natural person or legal entity having rent or leased the machine or being responsible at the time by contract or by law, are liable for the adoption of the necessary precautions.

Working near electric lines can be very dangerous, therefore some special precautions must be observed.

Within this Manual, "work near electric lines" means when the attachment or load raised by the excavator (in any position) may reach the minimum safety distance established by local or international Safety Regulations.

To work without risks, keep maximum possible distance from electric lines and never trespass minimum safety distance. Ensure that local or national safety regulations concerning work near electric lines are observed.

Prior to beginning the work near electric lines:

- Contact the Company owner of the electric lines or its nearest branch before starting the work. Look up the in the telephone directory.
- Define together with the Company representative which precautions should be taken to guarantee work safety.
- All electric lines should be considered as operative live lines even though it might be well known that the line in question is out of work and visibly connected to the ground.
- The Electric Power Company, if previously advised and involved in the work, as well as machine Operator, Owner and/or any natural person or legal entity having rent or leased the machine or being responsible at the time by contract or by law, are liable for the adoption of the necessary precautions.
- Decrease work speed. Reaction time could be too slow and distance evaluation wrong.
- Warn all ground personnel to keep clear of the machine and/or load at all times. If the load has to be guided down for laying, consult the Electric Power Company to know which precautions should be taken.
- Appoint a person in charge of signalling duties. This person will have the responsibility of observing the machine, any part of it and/or the load approaching the electric lines from a standpoint more favourable than the Operator's. This signal man (flag-man) must be in direct communication with the Operator and the Operator must pay undivided attention to the signals supplied.

When working in or near pits, in ditches or very high walls, check that the walls are sufficiently propped up to avoid cave-in hazards.

Pay the utmost attention when working near overhang walls or where landslides may take place. Make sure that the support surface is strong enough to prevent landslides.

When digging, there is the risk of cave-ins and landslides.

Always check ground conditions and conditions of the material to be removed. Support everywhere it is required to prevent possible cave-ins or landslides when:

- digging near previous trenches filled with material,
- digging in bad ground conditions,
- digging trenches subject to vibration from railroads, working machines or highway traffic.

### STOPPING

When the machine is to be stopped for whatever reason, always check that all controls are in the neutral position and that the safety lever is on the lock position to guarantee risk-free start-up.

Never leave the machine unattended with the engine running.

Prior to leaving the driver's seat, and after making sure that all people are clear of the machine, slowly lower the attachment until resting it safely to the ground. Retract possible auxiliary tools to the closed safety position.

Check that all controls are in the neutral position. Move engine controls to the shut-down position. Switch off the starter switch key. Consult the Operator's Manual.

Park the machine in a non-operating and no-traffic area. Park on firm level ground. If this is not possible, position the machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding.

If parking in traffic lanes cannot be avoided, provide appropriate flags, barriers, flares and other signals as required to adequately warn the oncoming drivers.

Always switch off the starter switch key before cleaning, repairing or servicing, or parking the machine to prevent accidental unauthorised start-up.

Never lower the attachment or auxiliary tools other than from sitting in the operator's seat. Sound the horn. Make sure that nobody is within the machine operating range. Lower the attachment slowly.

Securely block and lock the machine every time you leave it unattended. Return keys to the safe place previously agreed upon. Perform all necessary operations for stopping as detailed in the Operation and Maintenance Instruction Manual.

Drive the machine far from pits, trenches, rocky hanging walls, areas with overhead electric lines, and



## SAFETY PRECAUTIONS

SR2-1-5

slopes before stopping it at the end of the working day.

Align the upperstructure to the tracks in order to allow to easily get on and off the driver's compartment.

Move all controls to the position specified for machine stopping. Refer to the Operator's Manual.

Never park on an incline without accurately blocking the machine to prevent unexpected movement.

Follow stopping instructions contained in the Operator's Manual.

### MAINTENANCE

#### GENERALITIES

Carefully read the Operator's Manual before starting, operating, maintaining, fuelling or servicing the machine in any manner.

Read all safety plates mounted on the machine and observe instructions they contain before starting, operating, repairing, fuelling or servicing the machine.

Do not allow unauthorised personnel to repair or service the machine.

Follow all recommended maintenance and service procedures.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators when required. Ask your employer about safety regulations in force and protective equipment.

Do not use controls or hoses as hand holds. Hoses and controls are movable parts and do not provide solid support. Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and/or grab rails.

Never service the machine with someone sitting in the driver's seat, unless this person is an authorised operator assisting in the maintenance being carried out.

Keep the operator's compartment, step plates, grab rails and handles clear of foreign objects, oil, grease, mud or snow to minimise the danger of slipping or stumbling.

Clean mud or grease from your shoes before climbing on the machine or driving it.

Never attempt to operate the machine or its attachments from any position other than sitting in the operator's seat.

Keep the driver's seat free from foreign objects, especially if these are not secured.

Should it be necessary to move the attachment for

maintenance purposes, do not raise or lower the attachment from any other position than sitting in the operator's seat. Before starting the machine or moving its attachment, sound the horn and require that nobody remains near the machine.

Raise the attachment slowly.

Always lock all moving components or parts of the machine that must be lifted for maintenance purposes using adequate external means as required by local and national regulations. Do not allow anyone to pass or stay near or below a raised attachment. If you are not absolutely sure about your safety, do not stay or walk under a raised attachment.

Do not place head, body, limbs, hands, feet or fingers near articulated cutting edges deprived of the necessary guards, unless they are suitably and safely locked.

Never lubricate, repair or adjust the machine with the engine running, except when this is specifically required by the Operator's Manual.

Do not wear loose clothing, jewellery near rotating parts.

When service or maintenance require access to areas that cannot be reached from the ground, use a ladder or step platform conforming to local or national regulations to reach the working area. If such means are not available, use machine grab rails and steps. Always perform all service or maintenance work with the greatest care and attention.

Shop and/or field service platforms or ladders should be manufactured and maintained in accordance with local or national safety regulations in force.

Disconnect batteries and label all controls to warn that service work is in progress, according to local and national safety regulation requirements.

Block the machine and all attachments to be raised according to local and national safety regulation requirements.

Do not check or fill fuel tanks or install batteries near burning or smoking materials and open flames due to the presence of flammable vapours.

The fuel filler pipe nozzle must be constantly kept in contact with the filler neck and this even before fuel starts flowing in. Keep this contact from the beginning to the end of the fuelling operation to avoid possible generation of sparks due to static electricity.

Use a truck or trailer to haul a failed machine. Should it be necessary to tow it, provide for suitable danger signals as required by the local norms and regulations and observe recommendations given in the Operator's Manual. Load/unload the machine on firm level ground providing safe support to the wheels of the truck or trailer. Use strong access ramps, with adequate height and angle. Keep the trailer flatbed free of mud, oil or slippery materials. Tie the machine securely to the trailer and block carriages and upperstructure.

Never align holes or slots using your fingers; always





## SAFETY PRECAUTIONS

SR2-1-6

use appropriate aligning tools.

Remove all sharp edges and burrs from re-worked parts.

Use only approved and effectively grounded auxiliary power sources for heaters, battery chargers, pumps and similar equipment to reduce electrical shock hazard.

Lift and handle heavy components using hoisting devices of appropriate capacity. Ensure the parts are supported by appropriate straps and hooks.

Use lifting eyes provided to this aim.

Pay attention to bystanders near the lifting area.

Never pour gasoline or diesel fuel into open containers. Never use gasoline, solvents or other flammable fluids to clean parts. Use proprietary certified non-flammable, non-toxic solvents only.

When using compressed air to clean parts, wear safety glasses with side shields. Limit pressure to max. 2 bar, in accordance with local and national safety regulations in force.

Do not run the engine of this machine in closed buildings without proper forced ventilation capable to remove toxic exhaust gases concentrating in the air.

Do not smoke, nor allow open flames or sparks nearby while refuelling the unit or handling highly flammable materials.

Do not use open flames as light sources to look for leaks or inspect anywhere on the machine.

Make sure that all mechanical tools provided are in good condition at all times. Never use tools with mushroomed or damaged heads. Always wear eye protections with side shields.

Move with extreme care when working under, on or near the machine or its attachments.

In case of attachment tests during which the engine should be kept running, a qualified operator must sit in the driver's seat at all times while the mechanic is at work.

### **Keep hands and clothes far OFF moving parts.**

Stop the engine and move the safety lever to the lock position before starting adjusting or repairing an assembly.

Do not carry out any work on the attachment without prior authorisation. Observe recommended maintenance and repair procedures.

In case of field service, move the machine to level ground and block it. If work on an incline cannot be avoided, securely block the machine and its attachments. Move the machine to level ground as soon as possible. Do not twist chains and cables. Never use a twisted chain or cable for lifting or pulling. Always wear safety gloves to handle chains or cables.

Be sure chains and cables are firmly fastened and that the anchor point is strong enough to withstand the expected load. Keep all bystanders clear of the anchor point, cables or chains. **Do not pull or tow unless the operator's compartments of the**

### **machines involved are fitted with proper guards against cable or chain backlash.**

Keep the maintenance area clean and dry at all times.

Clean immediately all water and oil spillage.

Do not pile up oily or greasy rags as they represent a major fire hazard. Always store them in closed metal containers.

Before starting the machine or its attachment, check, adjust and lock the operator's seat. Also ensure that nobody is within the machine or attachment operating range before starting or operating the machine and/or its attachments. Sound the horn.

Rust inhibitors are volatile and flammable. Prepare parts in well ventilated areas. Keep open flames away. **Do not smoke.** Store containers in a cool well ventilated place where they could not be reached by unauthorised people.

Do not carry loose objects in your pockets that might fall unnoticed into open compartments.

Wear appropriate safety clothing such as hard hat, safety shoes and gloves, safety glasses when splinters or other particles may be ejected.

Wear the appropriate welder's equipment such as dark safety glasses or mask, hard hat, protective clothing, safety gloves and footwear always while welding or arc-cutting. Wear dark safety glasses when you are near a welding in progress. **Do not look the welding arc without proper eye protection.**

Become acquainted with all your jacking equipment and their capacity. Ensure that the jacking point on the machine is appropriate for the load applied. Also, be sure the supports under the jack and between the jack and the machine are appropriate and stable.

Any equipment supported by a jack represents a possible hazard. Always support the load onto appropriate blocking means as a safety measure before proceeding with service or maintenance work, in compliance with local or national safety regulations. Metal cables produce steel splinters. Always wear certified protection clothes such as safety gloves and glasses while handling them.

Handle all parts carefully. Keep hands and fingers away from gaps, gears, and similar. Always use and wear certified safety clothes such as safety glasses, gloves and footwear.

The attachment is kept constantly in position by an oil column trapped into the high pressure circuit. Lower the attachment to the ground and relieve pressure from all circuits prior to carrying out any type of maintenance or repair work.

Do not service or repair the machine if it is parked downhill. Consult the Operator's Manual for correct maintenance procedure.

Areas near articulated cutting edges where mechanical parts are in motion are where personal injuries are most likely to occur. Pay attention to prevent possible part movements by means of blocks or by keeping clear of such zones when motion may



## SAFETY PRECAUTIONS

SR2-1-7

take place during maintenance or repair.  
Move the hydraulic system lock safety lever to the lock position when stopping the machine for whatever reason.  
Always install the safety stays for the hood and other hinged covers before performing any maintenance or repair work in the engine compartment.

### TRANSFERS AND TRANSPORTATION

Before moving or transporting the machine, block upperstructure swing to prevent accidental movement.

Pay particular attention during transfer on inclines, both uphill and downhill. Keep the bucket in a position to provide a possible anchor point into the ground in case of slipping.

During transfers on inclines, both uphill and downhill, keep the upperstructure aligned with the carriages. Do not travel across the slope.

Never transfer the machine in the working site, in a crowded area, or near people without having at least one person charged with hand-signals who could guide the Operator.

Sound the horn to inform that you are about to move off.

It is necessary to know load limits of bridges and dimensional limits of tunnels. Such limits must never be exceeded. You should also know machine height, width, and weight. Have a signal-man help you when clearances are limited.

Check distance between boom/dipper and dimensional limits during transfer or transportation.

Rough terrain may cause the machine to sway and roll to such an extent that boom/dipper could get to contact electric lines or other obstacles. Cross obstacles at a right angle at low speed. Pay attention to machine shaking when the centre of gravity overcomes the obstacle.

Keep the bucket down at all times during transfers.

Drive with the lights on and use appropriate signals and flags.

Get to know and respect local and national regulations.

Consider boom/dipper and upperstructure dimensions while turning.

Use a ramp to load the machine on a trailer. If a ramp is not available, fabricate one using blocks. The ramp should be sufficiently strong to support machine weight. Always load and unload on level surface.

Tow the machine following the instructions contained in the Operator's Manual.

### ENGINE

Do not run the engine in closed buildings without proper ventilation capable to remove harmful exhaust fumes.

Do not place head, body, limbs, feet, hands or fingers

near rotating fans or belts. Be especially careful near blower fans.

Loosen the radiator cap very slowly to relieve system pressure before removing it. Always top-up coolant level with the engine off or idling if hot. See the Operator's Manual.

Keep the exhaust manifold and tube free from combustible matters. Fit the machine with shields and guards when working in the presence of combustible matter free in the air.

Do not refuel with the engine running, especially if hot, as this increases fire hazard in case of fuel spillage.

Never attempt to check or adjust fan belt tensions when the engine is running.

Do not adjust the fuel injection pump when the machine is operating.

Do not lubricate the machine with the engine running.

Do not run the engine with the air intakes open and not protected. If this cannot be avoided for service reasons, place protection meshes on all intakes before servicing the engine.

### ELECTRICAL SYSTEM

Pay attention to connect connecting cables to correct poles (+ to +) and (- to -) at both ends. Do not short-circuit terminals. Thoroughly follow instructions given in the Operator's Manual.

Always move the starter switch key into the lock position before servicing or repairing the machine.

Batteries contain SULPHURIC ACID. Protect the eyes when working near the batteries against possible sprays of the acid solution. Should acid contact skin, eyes, or clothes, RINSE IMMEDIATELY IN WATER FOR AT LEAST 15 MINUTES. Immediately seek medical attention.

**Battery released gas is highly flammable.** Leave the battery compartment cover open during recharging to improve ventilation. Never check battery charge by placing metal objects across the posts. Keep sparks or open flames away from batteries. Do not smoke near the battery to prevent explosion hazard.

Before any maintenance or repair, make sure that there are no fuel or electrolyte leaks from the batteries. If any, correct prior to proceeding with further work. Do not recharge batteries in confined spaces. Ensure proper ventilation is provided to avoid accidental explosions due to build-up of explosive gas released during charging.

Disconnect batteries before working on the electrical system or carrying out any other type of work.

### HYDRAULIC SYSTEM

Pressure fluid escaping from a very small hole can be almost invisible and still have sufficient force to



## SAFETY PRECAUTIONS

SR2-1-8

penetrate the skin. Always check any suspected pressure leaks using a piece of cardboard or wood. Do not use hands. If injured by escaping fluid, obtain medical attention immediately or serious infection or reaction may develop.

Stop the engine and ensure pressure is relieved from all systems before removing side panels, housings, guards and covers. See the Operator's Manual.

Always use gauges of adequate capacity for pressure testing. Refer to the Operator's Manual or Repair Manual.

Before removing objects from the tyre tread, deflate it.

Do not inflate tyres with flammable gas: they may cause explosions and serious personal injuries.

After each shift check for loose screws and/or rim mounting brackets. If necessary, tight them according to the instructions herein contained.

### TOOLS

Always keep head, body, limbs, feet, hands, and fingers away from the bucket and attachments, when in the raised position.

Prior to any maintenance or repair work, install all supports necessary to this aim according to local and national safety regulations.

In case the attachment is to be operated for maintenance or repair purposes, do so exclusively while sitting in the driver's seat. Sound the horn before starting the machine or moving the attachment. Require that nobody remain near the machine. Raise the attachment slowly.

Do not use the machine to transport loose objects, unless proper securing devices are provided.

### TYRES AND WHEELS

Make sure that the inflation pressure of the tyres is according to the specifications issued by the Manufacturer and check it periodically.

Should the pressure be changed, stand on the side of the tyre at a safe distance.

Pressure check operations must be performed with unloaded machine and cold tyres.

Never use reconditioned tyre rims, since eventual weldings, heat-treatments or repairs not performed correctly can weaken the wheel, thus causing subsequent damages or dangers.

Do not perform torch cutting or welding operations on rims with tyres installed.

Spare tyres must be inflated only as far it is necessary to keep the rim components assembled; remember that when not installed on the disc, a tyre inflated to maximum pressure can explode.

Before operating on tyres, block all wheels, front and rear. After lifting the machine with the cylinders, block it with stands according to current safety rules and regulations.

Deflate the tyres before removing them.





## SAFETY PRECAUTIONS

SR2-2-1

### RECOGNISE SAFETY INFORMATION

- This is your **SAFETY ALERT SYMBOL**.
  - When you see this symbol on your machine or in this Manual, be alert of the potential for personal injury.
  - Follow recommended precautions and safe operating practices.



F3264

### UNDERSTAND SIGNAL WORDS

- In this Manual you will find the following words:
  - **DANGER;**
  - **WARNING;**
  - **CAUTION.**

referring to different hazard risks.  
These words are always accompanied by the safety alert symbol.

**DANGER:** indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING:** indicated a potential hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION:** indicates a potential hazardous situation which, if not avoided, may result in minor or moderate injury.

**IMPORTANT:** indicates a situation which, if not avoided, may cause damage to the machine.

**NOTE:** indicates an additional explanation for information purposes.



**DANGER**



**WARNING**



**CAUTION**

**IMPORTANT  
NOTE**

### ENVIRONMENTAL PROTECTION

- This Manual also contains this symbol accompanying instructions for correct behaviour as regards environmental protection.



F5041




## SAFETY PRECAUTIONS

SR2-2-2


### FOLLOW SAFETY PRECAUTIONS

 - Carefully read and observe all safety signs on the machine and read all safety precautions in this Manual.
- Safety signs should be installed, maintained, and replaced when necessary.
  - If a safety sign or this Manual are damaged or missing, obtain a replacement from your Dealer **CASE** in the same way you order a spare part (be sure to detail machine model and serial number upon ordering).
- Learn how to operate the machine and its controls correctly and safely.
- Allow only trained, qualified, authorised personnel to operate the machine.
- Keep the machine in proper working conditions.
  - Unauthorised changes to the machine may impair function and/or safety and affect machine life.
- Safety messages in this Chapter “**SAFETY PRECAUTIONS**”, are intended to illustrate basic safety procedures of the machine. However, it is impossible for these safety messages to cover every hazardous situation you may encounter. If you have any doubts, consult your direct supervisor prior to operating or servicing the machine.

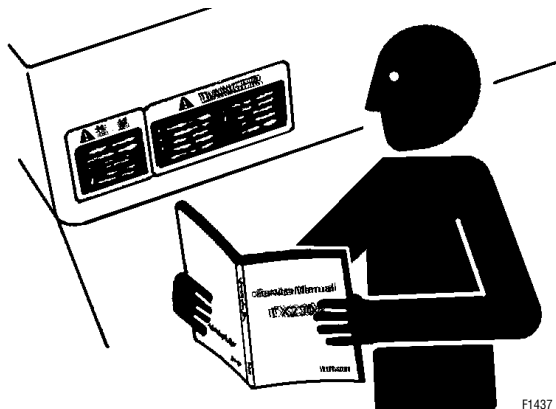

### PREPARE FOR EMERGENCIES

 - Be prepared if a fire starts or an accident occurs.
  - Keep the first-aid kit and fire extinguisher on hand.
  - Thoroughly read and understand the label attached to the fire extinguisher to use it properly.
  - Establish emergency priority procedures to cope with fires and accidents.
  - Keep emergency numbers for doctors, ambulance service, hospitals and fire department posted near the telephone.

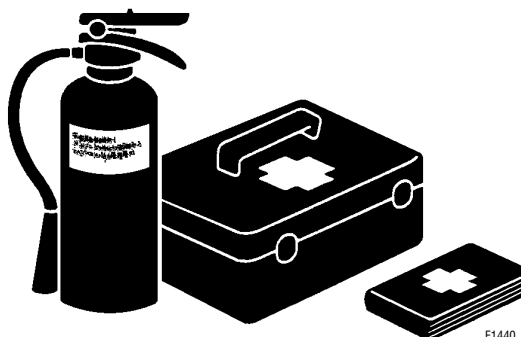




## SAFETY PRECAUTIONS

SR2-2-3

### WEAR PROTECTIVE CLOTHING

 - Wear close-fitting clothing and safety equipment appropriate to the job.  
You need:
  - A hard hat;
  - Safety shoes;
  - Safety glasses or face shield;
  - Heavy gloves;
  - Ear protection;
  - Reflective clothing;
  - Waterproof clothing;
  - Respirator or filter mask;Be sure to correctly wear equipment and clothing for the job.
- Do not take any chances.
- Avoid wearing loose clothing, jewellery, or other items that can catch on control levers or other parts of the machine.
- Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating the machine.

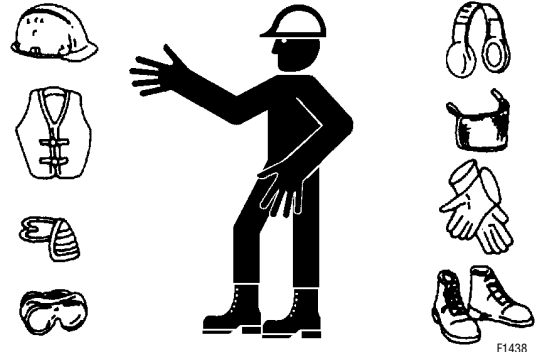

### PROTECT AGAINST NOISE

- Prolonged exposure to loud noise can cause impairment or loss of hearing.
  - Wear a suitable hearing protection such as earmuffs or earplugs to protect objectionable or uncomfortably loud noise.



### INSPECT THE MACHINE

- Inspect the machine carefully every day or work-shift by an attentive visual inspection of machine outside prior to starting it to prevent damages and personal injuries.
  - In the walk-around inspection, be sure to cover all points detailed in the Chapter “**MAINTENANCE**”, paragraph “**EXTERNAL VISUAL INSPECTION**”.





## SAFETY PRECAUTIONS

SR2-2-4

 
### USE HAND HOLDS AND STEPS

- Falling is one of the major causes of personal injury.
  - When you get on and off the machine, always face the machine and maintain a three-point contact with the steps and handrails.
  - Do not use any control as a handhold.
  - Never jump off the machine.
  - Never get on and off a moving machine.
  - Be careful of slippery conditions of platforms, steps, and handrails when leaving the machine.



### ADJUST THE OPERATOR'S SEAT

- A seat poorly adjusted for operator or work requirements may quickly fatigue the operator leading to improper operations.
  - The seat should be adjusted whenever machine operator changes.
  - The operator should be able to fully press the pedals and correctly move the control levers with his back resting against the seat back.
  - If not, move the seat fore and aft, and check again.

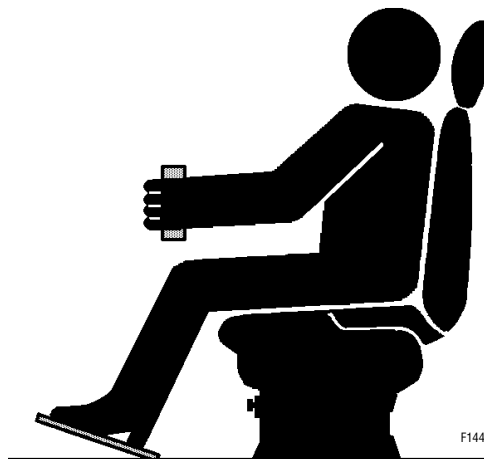




## SAFETY PRECAUTIONS

SR2-2-5


### FASTEN SEAT BELT

 - Should the machine overturn, the operator may become injured and/or thrown from the cab. Not only, the operator may be crushed by the overturning machine resulting in serious injury or even death.
  - Prior to operating the machine, thoroughly examine belt webbing, buckle, and attaching hardware. If any item is damaged or worn, replace the seat belt or component before operating the machine.
  - Be sure to remain seated with the seat belt securely fastened at all times when the machine is in operation to minimise injury hazard in case of accident.
  - After a significant accident, replace the seat belts even though they do not look damaged.

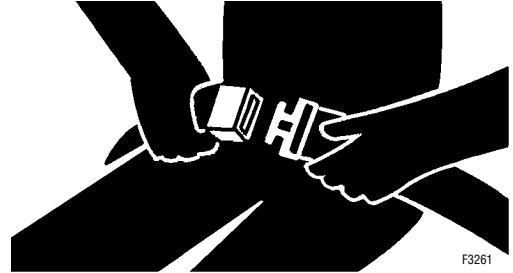

### MOVE AND OPERATE MACHINE SAFELY

 - Bystanders can be run over.
  - Confirm the location of bystanders before moving, swinging, or operating the machine.
  - Always keep the travel alarm in good working condition (if equipped).
  - It warns people when the machine starts to move.
  - Use a signal person when moving, swinging, or operating the machine in congested areas.
  - Coordinate hand signals before starting the machine.

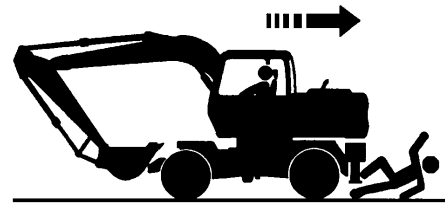



## SAFETY PRECAUTIONS

SR2-2-6

### OPERATE ONLY FROM THE DRIVER'S SEAT

 
- Avoid possible injury or machine damage.
  - **DO NOT** start the engine by shorting across starter terminals.
  - **NEVER** start the engine while standing on the track or on the ground.
  - Do not start the engine by shorting across starter motor terminals.
  - Before starting the engine, ensure that all control levers are in the neutral position.



F4041

### STARTING THE ENGINE WITH BOOSTER BATTERIES

- Battery gas may explode causing serious damages and injuries.
  - If the engine is to be started using booster batteries, ensure to comply with all procedures detailed in the chapter “**OPERATING INSTRUCTIONS**”.
  - The operator should be sitting in the driver's seat to keep the machine under control when the engine starts. Starting the engine with booster batteries is a two man operation.
  - Do not use batteries that have been stored in the cold for a long time.
  - Mistakes in following procedures detailed for starting the engine with slave batteries may cause the batteries to explode or machine to move unexpectedly.

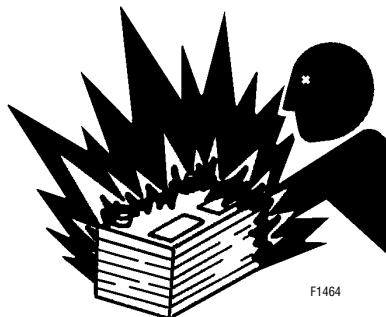

F1464

### DO NOT CARRY RIDERS ON THE MACHINE

- Riders on the machine are subject to injuries such as being struck by foreign objects and being thrown off the machine.
  - Only machine operator is allowed on the machine. Keep riders off.
  - Riders also obstruct the operator's visibility, resulting in the machine being operated **unsafely**.



F2444

Please click here and go  
back to our website.

**BUY NOW**

Then Instant Download the  
Complete Manual.

Thank you very much!