
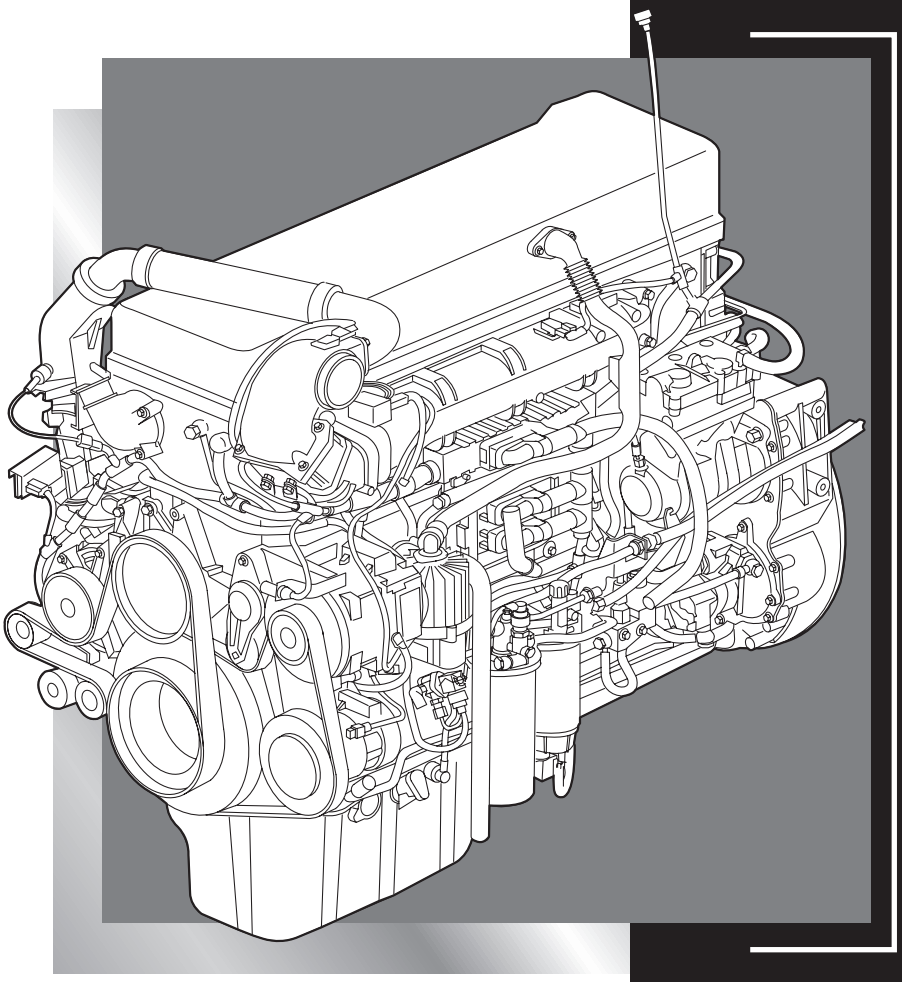


MACK® MP8 DIESEL ENGINE

SERVICE MANUAL
('07 EMISSIONS REGULATIONS)

JULY 2009
(REVISED)
5-113

MACK® MP8 DIESEL ENGINE SERVICE MANUAL ('07 EMISSIONS REGULATIONS)

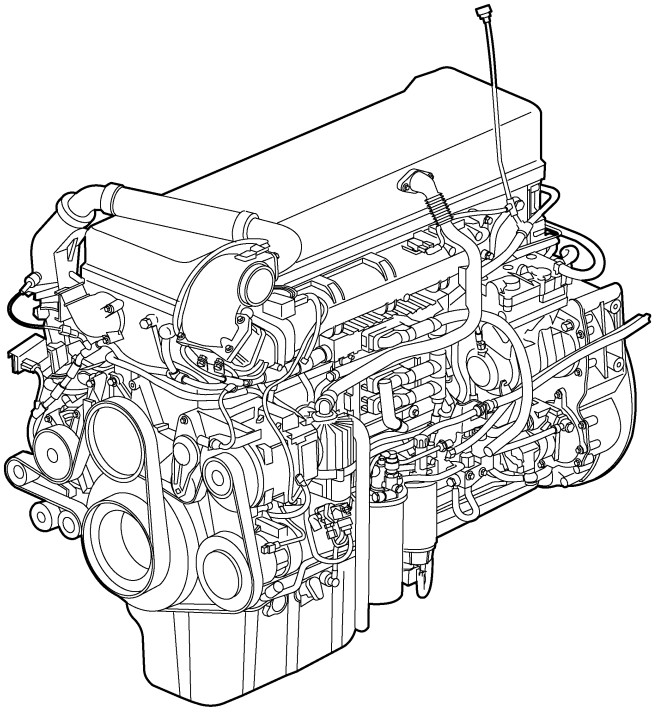

JULY 2009
(REVISED — SUPERSEDES ISSUE DATED JANUARY 2009)

© MACK TRUCKS, INC. 2009

ATTENTION

The information in this manual is not all inclusive and cannot take into account all unique situations. Note that some illustrations are typical and may not reflect the exact arrangement of every component installed on a specific chassis.

The information, specifications, and illustrations in this publication are based on information that was current at the time of publication. Note that illustrations and instructions are based on information that is subject to change as new engine/chassis development continues.

No part of this publication may be reproduced, stored in a retrieval system, or be transmitted in any form by any means including (but not limited to) electronic, mechanical, photocopying, recording, or otherwise without prior written permission of Mack Trucks, Inc.

TABLE OF CONTENTS

TABLE OF CONTENTS

INTRODUCTION 1
SAFETY INFORMATION 2
Advisory Labels 2
Service Procedures and Tool Usage 3
EXPLANATION OF NUMERICAL CODE 5
CONVERSION CHART 6
ABOUT THE MACK MP8 ENGINE 9
Service Precautions Summary 11

VISUAL IDENTIFICATION 13
MP8 ENGINE MODEL IDENTIFICATION 14
Engine Information Plate 14
Engine Serial Number Identification 14

DESCRIPTION AND OPERATION 15
MACK MP8 US07 ENGINE DESIGN FEATURES 16
Engine Components 17
Lubrication System 25
Crankcase Ventilation 27
Fuel System 28
PowerLeash™ Engine Brake 33
Exhaust Gas Recirculation System 34
Exhaust Aftertreatment System 36
Air Intake System 39
Variable Geometry Turbocharger 40
Cooling System 40
Engine Management System 41
GLOSSARY OF TERMS 44

COMPONENT LOCATOR 47
MP8 ENGINE COMPONENT LOCATION VIEWS 48

TROUBLESHOOTING 53
ENGINE SYMPTOM DIAGNOSIS 54
Troubleshooting Technique 54
Noise and Vibration 55
ENGINE CHECKS AND TESTS 56
Special Tools 56
Camshaft Sensor Depth, Check 59
Camshaft Timing, Check 60
Crankcase Ventilation, Check 60
Cylinder Head, Pressure Test 61
Cylinder Liner and Piston Wear, Check 63
EGR Cooler, Pressure Test 64
Engine Compression, Test 65
Flywheel Housing Runout, Check 67
Oil Cooler, Pressure Test 69
Rocker Arm, Check 69
Thermostat, Check 72
Valve Guide Wear, Check 73

TABLE OF CONTENTS

MAINTENANCE 75
LUBRICATION SYSTEM MAINTENANCE 76
Special Tool 76
Oil Level Check 76
Oil and Filter Change Procedure 77
Crankcase Ventilation System 77
FUEL FILTER REPLACEMENT 78
Fuel Filter Change 78
COOLING SYSTEM MAINTENANCE 79
Special Tool 79
Coolant Drain Outlets 80
Coolant Filter 80
EXHAUST AFTERTREATMENT SYSTEM MAINTENANCE 81
Special Tools 81
Diesel Particulate Filter 82
Aftertreatment Fuel Injector (AFI) 87
DRIVE BELT REPLACEMENT AND TENSIONING 90
General Information 90
Automatically Tensioned System 90

REPAIR INSTRUCTIONS, PART 1 91
ENGINE REMOVAL 92
Special Tools 92
General Instructions 93
Removal 93
ENGINE DISASSEMBLY 96
Special Tools 96
General Instructions 99
Mounting the Engine on a Repair Stand 99
EGR Crossover Piping Removal 101
EGR Venturi Tube Removal 102
Cylinder Head (Valve) Cover Removal 102
Engine Wiring Harness Removal 103
Aftertreatment Fuel Injector (AFI) and Diffuser Removal 104
Timing Gear Cover Removal 104
Camshaft Gear and Vibration Damper Removal 106
Rocker Arm Shaft Removal 106
Valve Yoke (Bridge) Removal 108
Camshaft Removal 109
Unit Injector Removal 110
Starter Removal 115
Turbocharger Removal 116
EGR Hot Pipe (Cooler Inlet) Removal 118
EGR Valve Removal 118
EGR Cooler Removal 120
Exhaust Manifold Removal 121
Oil Filter Housing Removal 122
Coolant and Pump Inlet Housings Removal 122
Cooling Duct Cover and Oil Cooler Removal 123
Drive Belts and Fan Hub Removal 124
EGR Mixer Removal 125
Crankcase Ventilation (CCV) Separator Removal 125

Fuel Lines and Filter Housing Removal 126
EECU and Cooling Plate Removal 127
Inlet Manifold Removal 129
Tandem Pump (Fuel and Power Steering) Removal 129
Air Compressor Removal 129
Flywheel and Pilot Bearing Removal 130
Power Take-Off (PTO) Assembly Removal 131
Flywheel Housing Removal 131
Crankshaft Rear Seal Removal 132
Timing Gear Train Removal 132
Timing Gear Plate Removal 134
Alternator and Refrigerant Compressor Removal 134
Thermostat and Cover Removal 135
Coolant Pump Removal 135
Cylinder Head Removal 136
Crankshaft Vibration Damper and Fan Pulley Removal 138
Crankshaft Front Cover Removal 138
Crankshaft Front Seal Removal 138
Oil Fill Pipe and Dipstick Retainer Removal 139
Oil Pan Removal 139
Front Engine Support Removal 140
Block Stiffener Plate Removal 140
Oil Pump Removal 141
Piston and Connecting Rod Assembly Removal 142
Main Bearing Cap Removal 143
Crankshaft Removal 144
CYLINDER BLOCK RECONDITIONING 145
Tools and Equipment 145
Piston Cooling Spray Nozzle Removal 146
Cylinder Liner Removal 146
Block Cleaning and Inspection 147
Liner Height Measurement 148
Cylinder Liner Installation 149
FLYWHEEL BENCH PROCEDURES 150
Flywheel Ring Gear Replacement 150
CONNECTING ROD AND PISTON BENCH PROCEDURES 151
Connecting Rod — Piston Disassembly 151
Piston Inspection and Cleaning 152
Piston Ring Inspection and Replacement 153
Connecting Rod — Piston Assembly 154
CYLINDER HEAD OVERHAUL 156
Tools and Equipment 156
Inlet and Exhaust Valve Removal 160
Cylinder Head Cleaning and Inspection 161
Valve Guide Replacement 161
Valve Spring Inspection 163
Injector Sleeve Replacement 164
Expansion Plug Replacement 171
Valve Inspection 171
Valve Installation 172

ROCKER ARM SHAFT BENCH PROCEDURES 173
Description 173
Rocker Arm Shaft Disassembly 174
Inspection 174
Rocker Arm Shaft Assembly 174
CAMSHAFT BENCH PROCEDURES 175
Camshaft Inspection 175
COOLING SYSTEM COMPONENTS BENCH PROCEDURES 176
Special Tools 176
Oil Cooler Reconditioning 177
EGR Cooler Cleaning 177
EGR Cooler Pressure Test 179
ENGINE REASSEMBLY 182
Special Tools 182
General Instructions 187
Crankshaft Installation 187
Main Bearing Cap Installation 188
Piston and Connecting Rod Assembly Installation 190
Oil Pump and Block Stiffener Plate Installation 193
Oil Pump Pipes and Strainer Installation 194
Front Engine Support Installation 195
Crankshaft Front Cover and Seal Installation 195
Timing Gear Plate Installation 197
Cylinder Head Installation 198
Camshaft Installation 201
Timing Gear Train Installation 202
Unit Injector Installation 205
Valve Yoke (Bridge) Installation 208
Rocker Arm Shaft and Engine Brake Installation 209
Flywheel Housing Installation 212
Crankshaft Rear Seal Installation 213
Flywheel and Pilot Bearing Installation 214
Oil Pan Installation 216
Oil Filler Pipe and Dipstick Pipe Installation 218
Power Take-Off Installation 218
Timing Gear Cover Installation 219
Coolant Pump Installation 221
Thermostat and Cover Installation 222
Coolant Pipe Installation 222
Oil Cooler and Cooling Duct Cover Installation 223
Oil Filter Housing Installation 225
Exhaust Manifold Installation 226
EGR Valve Installation 227
EGR Cooler Installation 229
EGR Hot Pipe (Cooler Inlet) Installation 230
Turbocharger Installation 232
Starter Installation 235
Air Compressor Installation 235
Tandem Pump (Fuel and Power Steering) Installation 237
Inlet Manifold Installation 237
EGR Mixer Installation 238

EECU and Cooler Installation . . . 239
Fuel Lines and Filter Housing Installation . . . 240
Crankcase Ventilation Separator . . . 241
Crankshaft Vibration Damper and Fan Pulley Installation . . . 242
Alternator and Refrigerant Compressor Installation . . . 243
Wiring Harness Installation . . . 243
Cylinder Head (Valve) Cover Installation . . . 245
EGR Venturi Tube and Crossover Piping Installation . . . 246
Fan Hub and Drive Belt Installation . . . 248
Removing Engine from Engine Stand . . . 249
Filters and Miscellaneous Components Installation . . . 250
ENGINE INSTALLATION . . . 251
Special Tools . . . 251
General Instructions . . . 251
Installation . . . 252

REPAIR INSTRUCTIONS, PART 2 . . . 255
IN-CHASSIS PART/COMPONENT PROCEDURES . . . 256
CAMSHAFT BEARING BRACKETS, REPLACEMENT . . . 256
Preliminary Steps . . . 256
General Information . . . 256
Camshaft Inspection . . . 257
Bracket Replacement Procedure . . . 257
Final Steps . . . 258
OIL THERMOSTAT AND PRESSURE SAFETY VALVE REPLACEMENT . . . 259
Pressure Safety Valve Removal . . . 259
Oil Thermostat Valve Replacement . . . 260
CRANKSHAFT FRONT SEAL REPLACEMENT . . . 261
Special Tools . . . 261
Seal Removal . . . 262
Seal Installation . . . 262
CRANKSHAFT REAR SEAL REPLACEMENT . . . 264
Special Tools . . . 264
Neoprene Seal Removal . . . 264
Neoprene Seal Installation . . . 265
Teflon® Seal Removal . . . 266
Teflon® Seal Installation . . . 266
CRANKCASE VENTILATION (CCV) SEPARATOR REPLACEMENT . . . 268
CCV Separator Removal . . . 268
CCV Separator Installation . . . 268
OIL PUMP REPLACEMENT (IN CHASSIS) . . . 269
Special Tools . . . 269
Oil Pump Removal . . . 270
Oil Pump Installation . . . 270
INJECTOR COPPER SLEEVE REPLACEMENT . . . 272
Tools and Equipment . . . 272
Preliminary Steps . . . 274
Copper Sleeve Removal . . . 274
Copper Sleeve Installation . . . 278
Final Steps . . . 281

UNIT INJECTOR CLEANING 282
Preliminary Steps 282
Cleaning and Inspection 282
Final Steps 283
TURBOCHARGER SMART REMOTE ACTUATOR (SRA) REPLACEMENT 284
Preliminary Steps 284
Turbocharger SRA Removal 284
Turbocharger SRA Inspection and Installation 286
Final Assembly 289
VALVE STEM HEIGHT MEASUREMENT PROCEDURE 290
VALVE STEM SEAL REPLACEMENT 293
Special Tools 293
Preliminary Steps 294
Seal Removal 294
Seal Installation 295
Final Steps 295

REPAIR INSTRUCTIONS, PART 3 297
MP8 ENGINE SETUP AND ADJUSTMENT 298
Special Tools 298
Valve and Unit Injector Adjustment 300
Checking and Adjusting Timing Gear Backlash 305
ENGINE FINAL PREPARATION AND OPERATIONAL CHECK 309
Filter Element Installation 309
Engine Lubrication System 309
Turbocharger 310
Cooling System 310
Fuel System 310
Engine Operational Check 312
REBUILT ENGINE RUN-IN PROCEDURES 312
General 312
Run-In Check 312

SPECIFICATIONS 313
MP8 US07 ENGINE MECHANICAL SPECIFICATIONS 314
Material and Dimensional Data 314
Engine Component Torque Specifications (Critical Fasteners) 319
Standard Bolt and Nut Torque Values 349
ENGINE GASKETS, LUBRICANTS AND SEALANTS 350
Gasket and Seal Reuse 350
Lubricants and Sealants 351

SPECIAL TOOLS & EQUIPMENT 353
MP8 ENGINE SERVICE TOOLS 354
Special Tools for Engine Overhaul 354

INDEX 369

INTRODUCTION


CLICK HERE TO DOWNLOAD!