
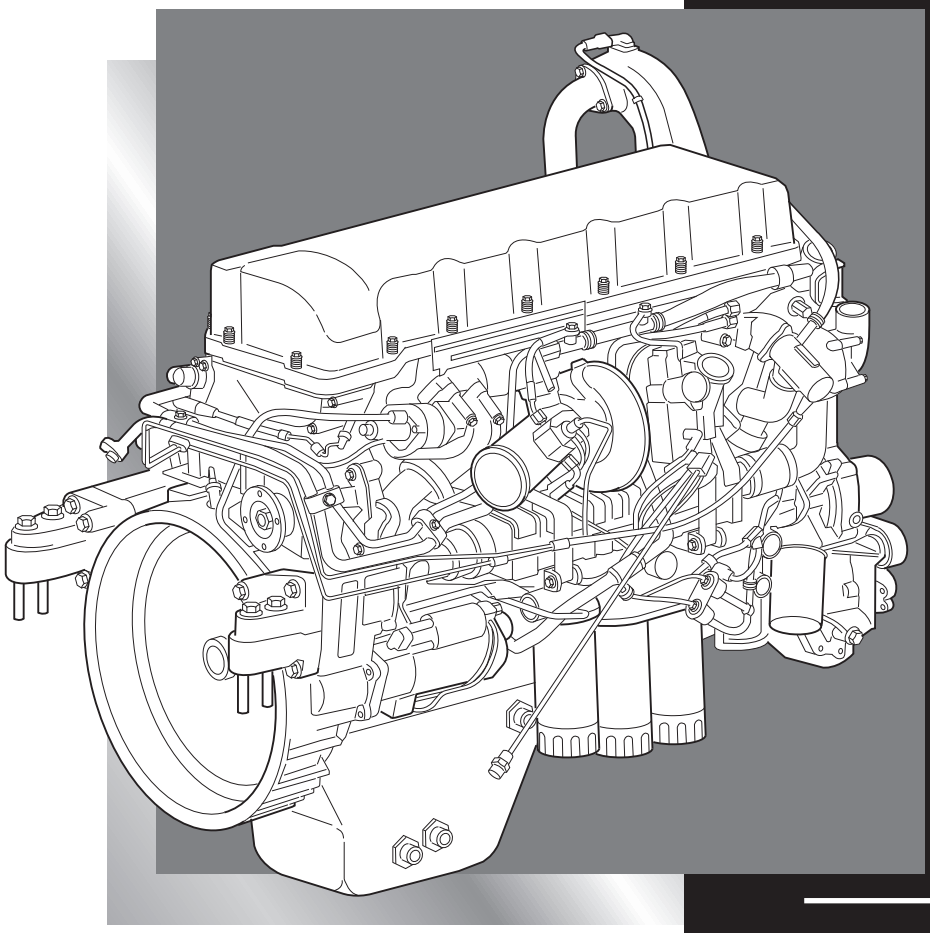


# MACK® MP7 DIESEL ENGINE

## SERVICE MANUAL
## ('07 EMISSIONS REGULATIONS)

JULY 2009
(REVISED)
5-114

# MACK® MP7 DIESEL ENGINE SERVICE MANUAL ('07 EMISSIONS REGULATIONS)

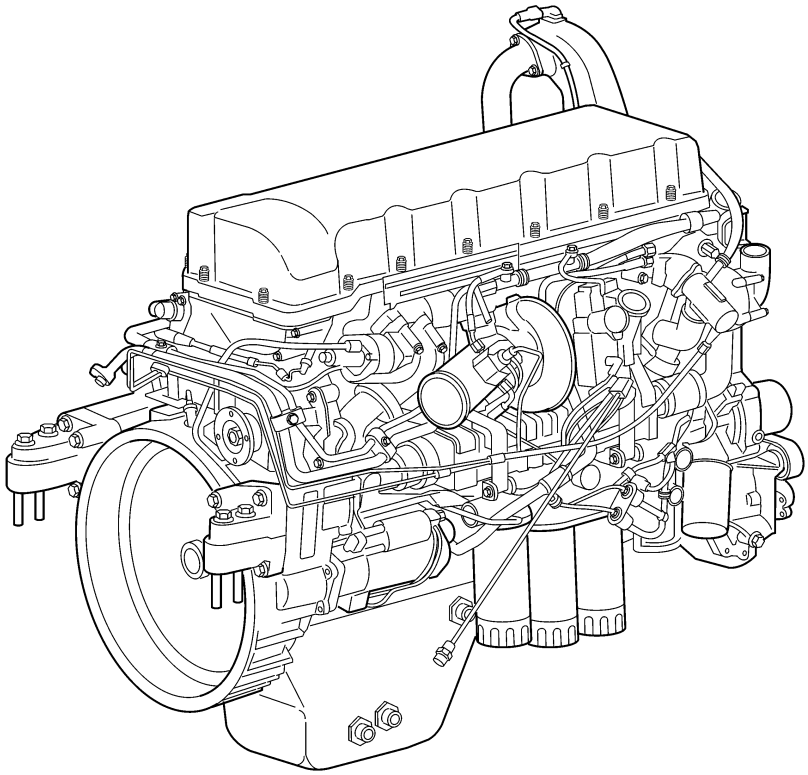

JULY 2009
(REVISED — SUPERSEDES ISSUE DATED JANUARY 2009)

© MACK TRUCKS, INC. 2009

# ATTENTION

**The information in this manual is not all inclusive and cannot take into account all unique situations. Note that some illustrations are typical and may not reflect the exact arrangement of every component installed on a specific chassis.**

**The information, specifications, and illustrations in this publication are based on information that was current at the time of publication. Note that illustrations and instructions are based on information that is subject to change as new engine/chassis development continues.**

**No part of this publication may be reproduced, stored in a retrieval system, or be transmitted in any form by any means including (but not limited to) electronic, mechanical, photocopying, recording, or otherwise without prior written permission of Mack Trucks, Inc.**

# TABLE OF CONTENTS

# TABLE OF CONTENTS


**INTRODUCTION** . . . . . 1
SAFETY INFORMATION . . . . . 2
Advisory Labels . . . . . 2
Service Procedures and Tool Usage . . . . . 3
EXPLANATION OF NUMERICAL CODE . . . . . 5
CONVERSION CHART . . . . . 6
ABOUT THE MACK MP7 ENGINE . . . . . 9
Service Precautions Summary . . . . . 13

**VISUAL IDENTIFICATION** . . . . . 15
MP7 ENGINE MODEL IDENTIFICATION . . . . . 16
Engine Information Plate . . . . . 16
Engine Serial Number Identification . . . . . 17

**DESCRIPTION AND OPERATION** . . . . . 19
MP7 ENGINE DESIGN FEATURES . . . . . 20
Engine Variants . . . . . 20
Engine Components . . . . . 20
Lubrication System . . . . . 32
Crankcase Ventilation . . . . . 34
Fuel System . . . . . 35
PowerLeash™ Engine Brake . . . . . 40
Exhaust Gas Recirculation System . . . . . 42
Exhaust Aftertreatment System . . . . . 44
Variable Geometry Turbocharger . . . . . 49
Cooling System . . . . . 50
Engine Management System . . . . . 51
GLOSSARY OF TERMS . . . . . 54

**COMPONENT LOCATOR** . . . . . 57
MP7 ENGINE COMPONENT LOCATION VIEWS . . . . . 58

**TROUBLESHOOTING** . . . . . 63
ENGINE SYMPTOM DIAGNOSIS . . . . . 64
Troubleshooting Technique . . . . . 64
Noise and Vibration . . . . . 65
ENGINE CHECKS AND TESTS . . . . . 66
Special Tools . . . . . 66
Camshaft Sensor Depth, Check . . . . . 69
Camshaft Timing, Check . . . . . 70
Crankcase Ventilation, Check . . . . . 70
Cylinder Head, Pressure Test . . . . . 71
Cylinder Liner and Piston Wear, Check . . . . . 72
EGR Cooler, Pressure Test . . . . . 74
Engine Compression, Test . . . . . 75
Flywheel Housing Runout, Check . . . . . 77
Oil Cooler, Pressure Test . . . . . 78
Rocker Arm, Check . . . . . 79
Thermostat, Check . . . . . 82
Valve Guide Wear, Check . . . . . 83

# TABLE OF CONTENTS


**MAINTENANCE** . . . . . 85
LUBRICATION SYSTEM MAINTENANCE . . . . . 86
Special Tool . . . . . 86
Oil Level Check . . . . . 86
Oil and Filter Change Procedure . . . . . 87
Crankcase Ventilation System . . . . . 88
FUEL FILTER REPLACEMENT . . . . . 89
Fuel Filter Change . . . . . 89
COOLING SYSTEM MAINTENANCE . . . . . 91
Special Tool . . . . . 91
Coolant Drain Outlets . . . . . 91
Coolant Filter . . . . . 91
EXHAUST AFTERTREATMENT SYSTEM MAINTENANCE . . . . . 92
Special Tools . . . . . 92
Diesel Particulate Filter . . . . . 93
Aftertreatment Fuel Injector (AFI) . . . . . 98
DRIVE BELT REPLACEMENT AND TENSIONING . . . . . 101
General Information . . . . . 101
Automatically Tensioned System . . . . . 102

**REPAIR INSTRUCTIONS, PART 1** . . . . . 103
ENGINE REMOVAL . . . . . 104
Special Tools . . . . . 104
General Instructions . . . . . 104
Removal . . . . . 105
ENGINE DISASSEMBLY . . . . . 108
Special Tools . . . . . 108
General Instructions . . . . . 111
Mounting the Engine on a Repair Stand . . . . . 111
Cylinder Head (Valve) Cover Removal . . . . . 112
Engine Wiring Harness Removal — External . . . . . 112
Engine Wiring Harness Removal — Internal . . . . . 113
Timing Gear Cover Removal . . . . . 113
Camshaft Gear and Vibration Damper Removal . . . . . 113
Rocker Arm Shaft and Engine Brake Removal . . . . . 114
Valve Yoke (Bridge) Removal . . . . . 115
Camshaft Removal . . . . . 116
Unit Injector Removal . . . . . 117
Starter Removal . . . . . 122
Turbocharger Removal . . . . . 123
EGR Hot Pipe (Cooler Inlet) Removal . . . . . 123
EGR Valve Removal . . . . . 124
EGR Cooler Removal . . . . . 125
Exhaust Manifold Removal . . . . . 126
Oil Filter Housing Removal . . . . . 127
Coolant Pipe Removal . . . . . 128
Cooling Duct Cover and Oil Cooler Removal . . . . . 129
Fan Drive, Idler and Fan Bracket Removal . . . . . 131
EGR Crossover (Cooler Outlet) Pipe Removal . . . . . 132
EGR Venturi Housing Removal . . . . . 132
EGR Mixer Removal . . . . . 132
Fuel Lines and Fuel Filter Housing Removal . . . . . 133

EECU and Cooling Plate Removal . . . . . 134
Inlet Manifold Removal . . . . . 135
Tandem Pump (Fuel and Power Steering) Removal . . . . . 136
Air Compressor Removal . . . . . 136
Flywheel and Pilot Bearing Removal . . . . . 137
Power Take-Off (PTO) Assembly Removal . . . . . 137
Flywheel Housing Removal . . . . . 138
Crankshaft Rear Seal Removal . . . . . 139
Timing Gear Train Removal . . . . . 139
Timing Gear Plate Removal . . . . . 141
Alternator and Refrigerant Compressor Removal . . . . . 141
Thermostat and Cover Removal . . . . . 142
Coolant Pump Removal . . . . . 142
Cylinder Head Removal . . . . . 143
Crankshaft Vibration Damper and Fan Pulley Removal . . . . . 146
Crankshaft Front Cover Removal . . . . . 146
Crankshaft Front Seal Removal . . . . . 147
Oil Fill Pipe and Dipstick Retainer Removal . . . . . 147
Oil Pan Removal . . . . . 147
Front Engine Support Removal . . . . . 148
Oil Pump and Valve Housing Removal . . . . . 148
Block Stiffener Plate Removal . . . . . 150
Piston and Connecting Rod Assembly Removal . . . . . 151
Main Bearing Cap Removal . . . . . 152
Crankshaft Removal . . . . . 153
CYLINDER BLOCK RECONDITIONING . . . . . 154
Tools and Equipment . . . . . 154
Piston Cooling Spray Nozzle Removal . . . . . 155
Cylinder Liner Removal . . . . . 155
Cylinder Block Cleaning and Inspection . . . . . 156
Cylinder Liner Height Measurement . . . . . 157
Cylinder Liner Installation . . . . . 158
FLYWHEEL BENCH PROCEDURES . . . . . 159
Flywheel Ring Gear Replacement . . . . . 159
CONNECTING ROD AND PISTON BENCH PROCEDURES . . . . . 160
Connecting Rod — Piston Disassembly . . . . . 160
Piston Inspection and Cleaning . . . . . 162
Piston Ring Inspection and Replacement . . . . . 163
Connecting Rod — Piston Assembly . . . . . 164
CYLINDER HEAD OVERHAUL . . . . . 166
Tools and Equipment . . . . . 166
Inlet and Exhaust Valve Removal . . . . . 169
Cylinder Head Cleaning and Inspection . . . . . 170
Valve Guide Replacement . . . . . 171
Valve Spring Inspection . . . . . 172
Injector Sleeve Replacement . . . . . 173
Expansion Plug Replacement . . . . . 180
Valve Inspection . . . . . 181
Valve Installation . . . . . 181

ROCKER ARM SHAFT BENCH PROCEDURES . . . . . 183
Description . . . . . 183
Rocker Arm Shaft Disassembly . . . . . 184
Inspection . . . . . 184
Rocker Arm Shaft Assembly . . . . . 184
CAMSHAFT BENCH PROCEDURES . . . . . 185
Camshaft Inspection . . . . . 185
COOLING SYSTEM COMPONENTS BENCH PROCEDURES . . . . . 186
Special Tool . . . . . 186
Oil Cooler Reconditioning . . . . . 187
EGR Cooler Cleaning . . . . . 188
EGR Cooler Pressure Test . . . . . 190
ENGINE REASSEMBLY . . . . . 192
Special Tools . . . . . 192
General Instructions . . . . . 195
Crankshaft Installation . . . . . 196
Main Bearing Cap Installation . . . . . 197
Piston and Connecting Rod Assembly Installation . . . . . 199
Block Stiffener Plate Installation . . . . . 203
Oil Pump and Valve Housing Installation . . . . . 204
Front Engine Support Installation . . . . . 205
Crankshaft Front Cover Installation . . . . . 206
Crankshaft Front Seal Installation . . . . . 207
Timing Gear Mounting Plate Installation . . . . . 208
Cylinder Head Installation . . . . . 209
Camshaft Installation . . . . . 212
Unit Injector Installation . . . . . 214
Valve Yoke (Bridge) Installation . . . . . 217
Rocker Arm Shaft and Engine Brake Installation . . . . . 218
Timing Gear Train Installation . . . . . 221
Flywheel Housing Installation . . . . . 224
Oil Pan Installation . . . . . 225
Oil Filler Pipe and Dipstick Pipe Installation . . . . . 227
Power Take-Off Installation . . . . . 227
Timing Gear Cover Installation . . . . . 227
Crankshaft Rear Seal Installation . . . . . 229
Flywheel and Pilot Bearing Installation . . . . . 229
EGR Crossover (Cooler Outlet) Pipe Installation . . . . . 231
Fan Bracket Installation . . . . . 231
Coolant Pump Installation . . . . . 232
Thermostat and Cover Installation . . . . . 233
Oil Cooler and Cooling Duct Cover Installation . . . . . 233
Coolant Pipe Installation . . . . . 237
Oil Filter Housing Installation . . . . . 238
Exhaust Manifold Installation . . . . . 238
EGR Valve Installation . . . . . 239
EGR Cooler Installation . . . . . 240
EGR Cooler Inlet Pipe Installation . . . . . 240
Turbocharger Installation . . . . . 241
Starter Installation . . . . . 242
Air Compressor Installation . . . . . 243


BUY NOW
PayPal
VISA
MasterCard
DISCOVER
AMERICAN EXPRESS