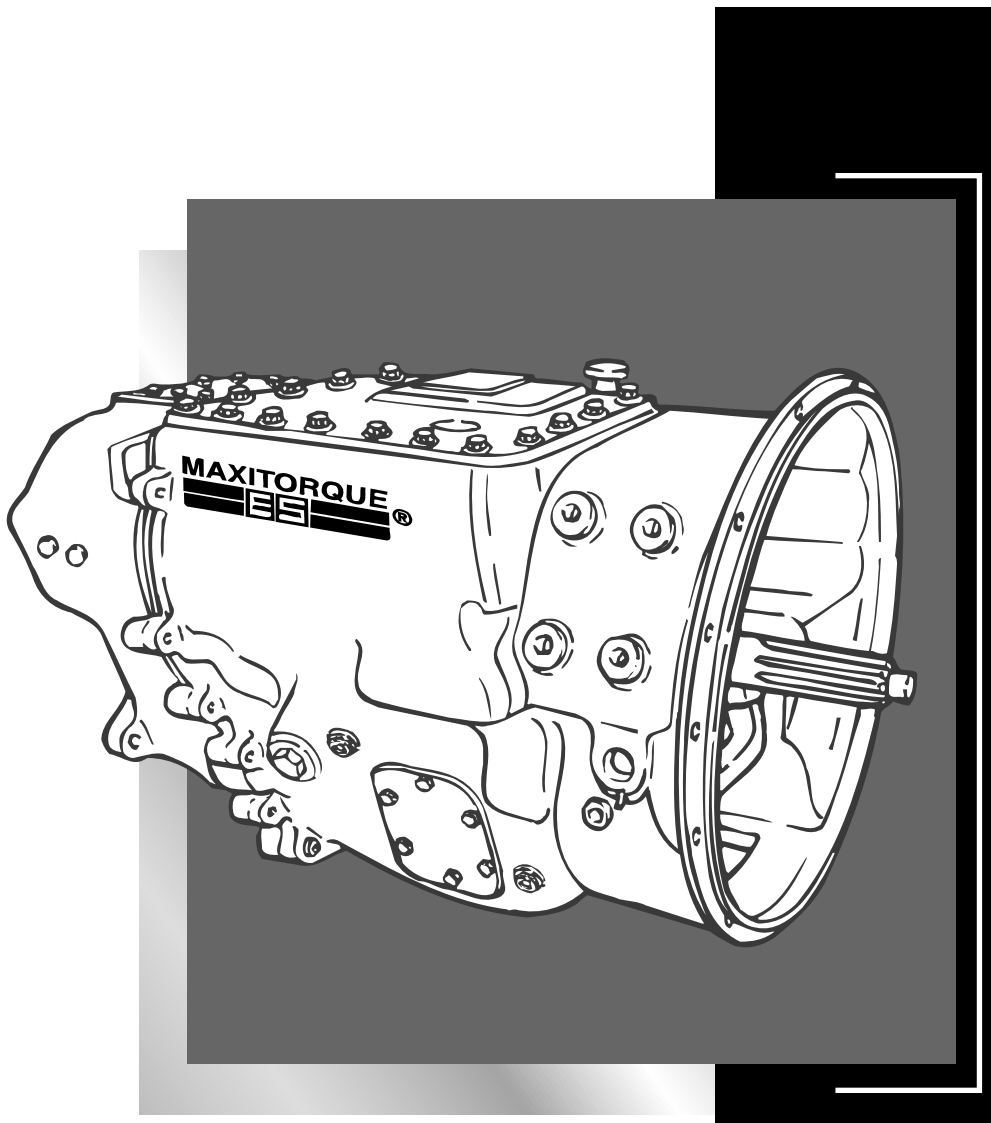



MAXITORQUE® ES

# TRANSMISSION

# T310

## SERVICE MANUAL

APRIL 2003
(NEW ISSUE)
10-126

newknow.fm Page 1 Thursday, May 21, 1998 2:23 PM

# PLEASE LET US KNOW!

Your comments and suggestions will help us improve this manual!

Please complete and mail this form or FAX your comments to: (610) 709-3800.

Manual: _____ Publication Number: _____

Vehicle Model: _____ Model Year: _____

Do you find procedures properly organized and easy to follow? ☐ Yes ☐ No

If not, please explain: _____

_____

_____

Manual page numbers: _____

Are there any important procedures or other information presently not in this manual that you would like to see included? ☐ Yes ☐ No

If yes, please describe: _____

_____

_____

Did you find any errors in the procedures or illustrations? ☐ Yes ☐ No

If yes, what pages? _____

Please explain: _____

_____

Please include a copy of each page in question and mark your comments and suggestions.

Name: _____ Phone: (_____) _____-_____

Company: _____

Address: _____

City: _____ State: _____ Zip: _____

Position Title: _____

***Thank You For Your Assistance***

**Mack Trucks, Inc.**

**(ATTENTION: RTS STAFF, 6S3)**

***DO NOT STAPLE — USE TRANSPARENT TAPE***

Busreply.fm Page 1 Thursday, May 21, 1998 2:24 PM

FOLD ALONG THIS LINE • DO NOT STAPLE • USE TRANSPARENT TAPE

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS MAIL PERMIT NO. 1602 ALLENTOWN, PA

POSTAGE WILL BE PAID BY ADDRESSEE

SERVICE PUBLICATIONS (RTS), 6S3
MACK TRUCKS INC
WORLD HEADQUARTERS
PO BOX M
ALLENTOWN PA 18105-9972


FOLD ALONG THIS LINE

MAXITORQUE® ES®

# TRANSMISSION

# T310

# SERVICE MANUAL

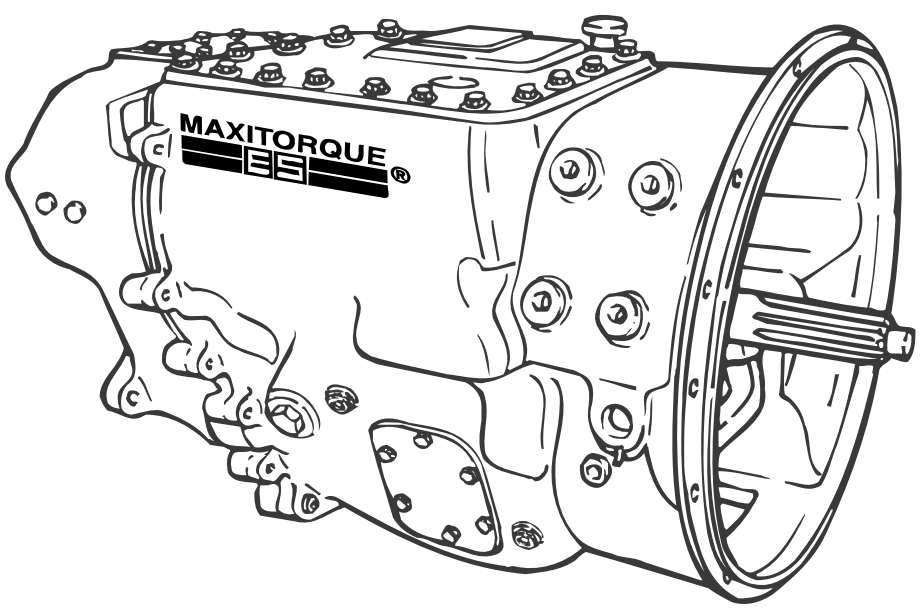


APRIL 2003
(NEW ISSUE)

© MACK TRUCKS, INC. 2003

# ATTENTION

**The information in this manual is not all inclusive and cannot take into account all unique situations. Note that some illustrations are typical and may not reflect the exact arrangement of every component installed on a specific chassis.**

**The information, specifications, and illustrations in this publication are based on information that was current at the time of publication.**

**No part of this publication may be reproduced, stored in a retrieval system, or be transmitted in any form by any means including (but not limited to) electronic, mechanical, photocopying, recording, or otherwise without prior written permission of Mack Trucks, Inc.**

front.fm Page iii Thursday, December 19, 2002 10:54 AM

# TABLE OF CONTENTS

TABLE OF CONTENTS

front.fm Page iv Thursday, December 19, 2002 10:54 AM

# TABLE OF CONTENTS

**INTRODUCTION** . . . . . 1
SAFETY INFORMATION . . . . . 2
Advisory Labels . . . . . 2
Service Procedures and Tool Usage . . . . . 3
EXPLANATION OF NUMERICAL CODE . . . . . 5
CONVERSION CHART . . . . . 6

**VISUAL IDENTIFICATION** . . . . . 9
TRANSMISSION IDENTIFICATION . . . . . 10
Unit Identification Stamping Location . . . . . 10

**DESCRIPTION AND OPERATION** . . . . . 13
DESCRIPTION AND OPERATION . . . . . 14
T310 Transmissions . . . . . 14
Lubrication . . . . . 15
Gear Ratios and Shift Pattern . . . . . 16
T310 Shifting Instructions . . . . . 17
Power Flow Diagrams . . . . . 17

**COMPONENT LOCATOR** . . . . . 21
COMPONENT LOCATOR . . . . . 22

**TROUBLESHOOTING** . . . . . 23
TROUBLESHOOTING CHARTS . . . . . 24

**MAINTENANCE** . . . . . 27
TRANSMISSION MAINTENANCE . . . . . 28
Checking Oil Level . . . . . 28
Changing Oil . . . . . 29
Change Interval . . . . . 29
Draining Oil . . . . . 29
Oil Fill . . . . . 29
Magnetic Oil Filter Plug . . . . . 30
Air Breather . . . . . 30

**REPAIR INSTRUCTIONS** . . . . . 31
TRANSMISSION DISASSEMBLY PROCEDURES . . . . . 32
TRANSMISSION COMPONENT DISASSEMBLY . . . . . 51
Main Case Shift Cover Disassembly [323] . . . . . 51
Two-Position Range Shift Cylinder Disassembly [324] . . . . . 65
Range Shift Valve [323] . . . . . 66
Main Drive Pinion Disassembly [322] . . . . . 68
Front Mainshaft Disassembly [322] . . . . . 71
Rear Mainshaft and Synchronizer Disassembly [322] . . . . . 78
Synchronizer Disassembly [322] . . . . . 81
Rear Mainshaft Bearing Cover Disassembly [321] . . . . . 83
Compound Main Drive Gear Disassembly [322] . . . . . 84
Front Countershaft Front Bearing Cover Disassembly [321] . . . . . 85
Front Countershaft Disassembly [322] . . . . . 86
Front Countershaft Rear Bearing Cover Disassembly [321] . . . . . 89
Rear Countershaft Disassembly [322] . . . . . 90
Rear Countershaft Bearing Cover Disassembly [321] . . . . . 92
Reverse Idler Gear Disassembly [322] . . . . . 93

front.fm Page v Thursday, December 19, 2002 10:54 AM

# TABLE OF CONTENTS


INSPECTION OF PARTS . . . . . 94
Inspection and Cleaning . . . . . 94
Bearings [322] . . . . . 94
Gears [322] . . . . . 94
Shifter Forks, Sliding Clutches and Shift Rails [323] . . . . . 94
Oil Seals [321] . . . . . 95
General Inspection . . . . . 96
General Reassembly Instructions . . . . . 96
TRANSMISSION COMPONENT REASSEMBLY . . . . . 97
Reverse Idler Gear Reassembly [322] . . . . . 97
Rear Countershaft Bearing Cover Reassembly [321] . . . . . 98
Rear Countershaft Reassembly [322] . . . . . 99
Front Countershaft Rear Bearing Cover Reassembly [321] . . . . . 100
Front Countershaft Reassembly [322] . . . . . 101
Front Countershaft Front Bearing Cover Reassembly [321] . . . . . 105
Compound Main Drive Gear Reassembly [322] . . . . . 106
Rear Mainshaft Bearing Cover Reassembly [321] . . . . . 107
Synchronizer Reassembly [322] . . . . . 109
Rear Mainshaft Reassembly [322] . . . . . 112
Front Mainshaft Reassembly [322] . . . . . 116
Main Drive Pinion Reassembly [322] . . . . . 124
Range Shift Valve [323] . . . . . 127
Two-Position Range Shift Cylinder Reassembly [324] . . . . . 129
Main Case Shift Cover Reassembly [323] . . . . . 134
TRANSMISSION REASSEMBLY PROCEDURES . . . . . 147

**SPECIFICATIONS** . . . . . 169
SPECIFICATIONS . . . . . 170
Torque Specifications . . . . . 170
Gear Identification . . . . . 172
Fits and Limits . . . . . 174
General Tolerances . . . . . 175
Transmission Specifications and Capacities . . . . . 176

**SCHEMATIC & ROUTING DIAGRAMS** . . . . . 177
SCHEMATIC DIAGRAMS . . . . . 178
Air Piping Diagram . . . . . 178
Air Control Schematic . . . . . 179

**SPECIAL TOOLS & EQUIPMENT** . . . . . 181
SPECIAL TOOLS AND EQUIPMENT . . . . . 182
Special Tools . . . . . 182

**DISASSEMBLED VIEWS** . . . . . 183
DISASSEMBLED VIEWS . . . . . 184

**INDEX** . . . . . 191

Click on the image link below for the full version of the service manual

