430/440 SKID STEER
Service Manual
Bur 6-78960

Table of Contents

Description	Section Number	Publication Form Number
General	**Tab 1**	
Section Index - General		6-79150
Fluids and Lubricants	1001	6-79030
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
Engines	**Tab 2**	
Section Index - Engines		6-79160
Engine and Radiator Removal and Installation	2000	6-79290
For Engine Repair - See Engine Service Manual		6-74500
Fuel Systems	**Tab 3**	
Section Index - Fuel Systems		6-79170
For Fuel System Repair - See the Engine Service Manual		6-74500
Electrical	**Tab 4**	
Section Index - Electrical		6-79180
Electrical System Specifications, Troubleshooting, and Schematics	4001	6-79370
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53090
Power Train	**Tab 6**	
Section Index - Power Train		6-79190
Hydrostatic System Troubleshooting	6001	6-79330
Removal and Installation of Hydrostatic Components	6002	6-79320
Drive Coupling	6003	6-79230
Piston Pump	6004	6-49580
Drive Motors Single Speed	6005	6-79000
Drive Motors Two Speed	6005	6-79010
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310

CNH AMERICA LLC.
700 State Street
Racine, WI 53404 U.S.A.

Copyright © 2005 CNH America LLC.
All rights reserved.
Printed in U.S.A.

Issued February, 2005

430/440 SKID STEER
Service Manual
Bur 6-78960

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Brakes	**Tab 7**	
Section Index - Brakes		6-79200
Removal and Installation of Park Brake Components	7002	6-79440
Hydraulics	**Tab 8**	
Section Index - Hydraulics		6-79210
Hydraulic System Troubleshooting and Schematics	8001	6-79340
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79430
Gear Pump (Equipment and High Flow)	8004	6-79350
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550
Mounted Equipment	**Tab 9**	
Section Index - Mounted Equipment		6-79220
Pedals and Levers	9001	6-79420
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant	9011	6-79460
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant	9012	6-79470
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging	9013	6-79480
Air Conditioner Component Service for Systems with R-134A Refrigerant	9014	6-79490
Schematic Set		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	6-78980

SECTION INDEX

GENERAL

Section Title	Section Number
Fluids and Lubricants	1001
Standard Torque Specifications	1002
Metric Conversion Chart	1003

CNH AMERICA LLC
700 State Street
Racine, WI 53404 U.S.A.

Bur 6-79150

Copyright © 2005 CNH America LLC
All rights reserved.
Printed in U.S.A.

Issued February, 2005

Section 1001

FLUIDS AND LUBRICANTS

CNH AMERICA LLC
700 State Street
Racine, WI 53404 U.S.A.

Bur 6-79030

Copyright © 2005 CNH America LLC
Printed in U.S.A.
February, 2005

TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS 3
ENVIRONMENT 3
ENGINE LUBRICATION 4
Engine Oil Selection 4
Oil Viscosity/Temperature Ranges 4
DIESEL FUEL SYSTEM 5
Fuel Storage 5
Specifications for Acceptable No. 2 Diesel Fuel 5

CAPACITIES AND LUBRICANTS

FUEL TANK
- Capacity ..... 83.3 litres (22 U.S. gallons)
- Specifications ..... See diesel fuel specifications on page 5

COOLING SYSTEM
- Capacity ..... 17 litres (17.9 quarts)
- Recovery bottle capacity ..... 2 litres (2.1 quarts)
- Specifications ..... 50% water and 50% ethylene glycol

HYDRAULIC SYSTEM
- Capacity - Total System ..... 50.2 litres (13.3 gallons)
- Capacity - Reservoir ..... 32.4 litres (7.1 gallons)
- Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W30

CHAIN COMPARTMENTS
- Capacity - Each Side ..... 5.7 litres (6.0 quarts)
- Specifications ..... Case Akcela No. 1 Engine Oil, SAE 10W30

BATTERY
- Quantity ..... As required
- Specifications ..... Distilled water

GREASE FITTINGS
- Quantity ..... As required
- Attachments (If equipped) ..... Quantity as required
- Specifications ..... Case molydisulfide grease

ENGINE CRANKCASE OIL (410 and 420 MACHINES)
- Capacity - with filter change ..... 8.7 litres (9.2 quarts)
- Capacity - without filter change ..... 8.5 litres (9 quarts)
- Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W-30 (API service CH-4) ..... (See Oil Viscosity/Temperature Ranges Chart on page 4)

ENGINE CRANKCASE OIL (430 and 440 MACHINES)
- Capacity - with filter change ..... 12 litres (12.7 quarts)
- Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W-30 (API service CH-4) ..... (See Oil Viscosity/Temperature Ranges Chart on page 4)

ENVIRONMENT

Before you service this machine and dispose of oil, fluids and lubricants, always remember the environment. Do not put oil or fluids into the ground or into containers that can leak. Check with your local environmental, recycling center or your Case dealer for correct disposal information.

ENGINE LUBRICATION


Engine Oil Selection

Case Akcela No. 1 Engine Oil is recommended for use in your Case Engine. Case Akcela Engine Oil will lubricate your engine correctly under all operating conditions.

See the chart below for recommended viscosity at ambient temperature ranges.

NOTE: *Do not put Performance Additives or other oil additive products in the engine crankcase. The oil change intervals given in the operating manual are according to tests with Case lubricants.*

Oil Viscosity/Temperature Ranges

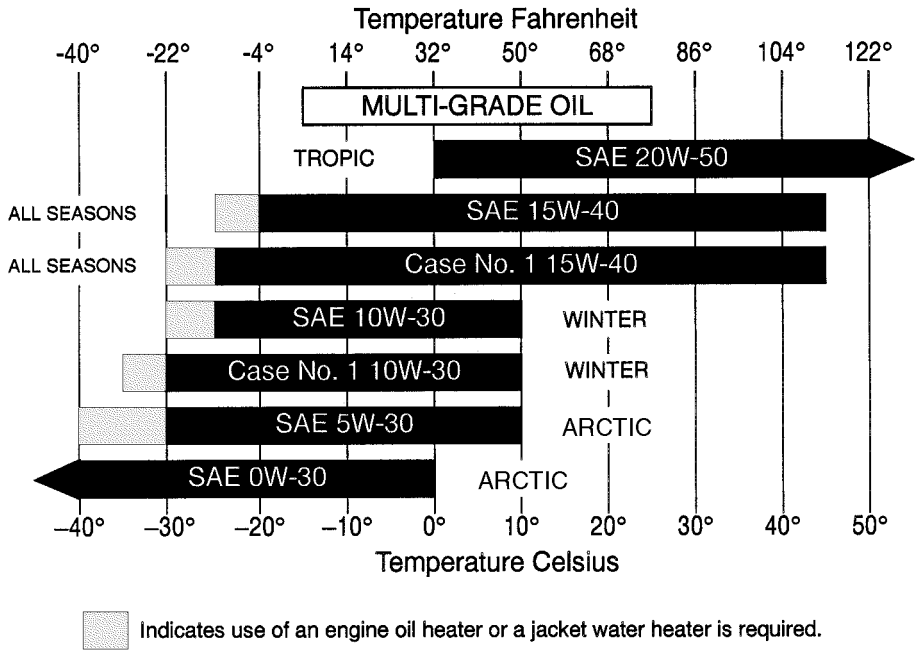

BS99N019

DIESEL FUEL SYSTEM

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following:

NOTE: *See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will restrict the fuel filter and cause the engine to loose power or not start.*

The diesel fuel used in this machine must meet the specifications below, “Specifications for Acceptable No. 2 Diesel Fuel” or Specification D975-81 of the American Society for Testing and Materials.

Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.

Specifications for Acceptable No. 2 Diesel Fuel

API Gravity, Minimum	34
Flash Point, Minimum	60° C (140° F)
Cloud Point (wax appearance point), Maximum	-20° C (-5° F)
Pour Point, Maximum	-26° C (-15° F)
Distillation Temperature, 90% Point	282 to 338° C (540 to 640° F)
Viscosity, at 38° C (100° F)	
Centistokes	2.0 to 4.3
Saybolt Seconds Universal	32 to 40
Cetane Number, Minimum	43 (45 to 55 for winter or high altitudes)
Water and Sediment, by Volume, Maximum	0.5 of 1%
Sulphur, by Weight, Maximum	0.5 of 1%
Copper Strip Corrosion, Maximum	No. 2
Ash, by Weight, Maximum	0.1 of 1%

NOTES



Section

1002

STANDARD TORQUE SPECIFICATIONS

CNH AMERICA LLC
700 State Street
Racine, WI 53404 U.S.A.

Bur 7-52931

© 2005 CNH America LLC
Printed in U.S.A.
September, 1998

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE 3
Grade 5 Bolts, Nuts, and Studs 3
Grade 8 Bolts, Nuts, and Studs 3

TORQUE SPECIFICATIONS - METRIC HARDWARE 4
Grade 8.8 Bolts, Nuts, and Studs 4
Grade 12.9 Bolts, Nuts, and Studs 4
Grade 10.9 Bolts, Nuts, and Studs 4

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 5
37 Degree Flare Fitting 5
Straight Threads with O-ring 5
Split Flange Mounting Bolts 6
O-Ring Face Seal End 6
O-Ring Boss End
Fitting or Lock Nut 6
Pipe fittings 7