**NOTE:** *Engine repair information is not contained within this Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

*84202702 - For 6-Cylinder 6.7L NEF Engine*

# BOOK 1 - 84258779

STANDARD TORQUE SPECIFICATIONS ..... SECTION 1000
TORQUE SPECIFICATIONS - U.S. HARDWARE ..... 1000-3
TORQUE SPECIFICATIONS - METRIC HARDWARE ..... 1000-5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS ..... 1000-7

SAFETY ..... SECTION 1010
PRECAUTIONARY STATEMENTS ..... 1010-3
PERSONAL SAFETY ..... 1010-3
MACHINE SAFETY AND INFORMATION ..... 1010-3
SAFETY RULES ..... 1010-4

LUBRICATION ..... SECTION 1020
SPECIAL TOOLS ..... 1020-3
MAINTENANCE SCHEDULE ..... 1020-7

SPECIFICATIONS ..... SECTION 1030
Diesel Engine ..... 1030-3
Engine Lubrication System ..... 1030-3
Cooling System ..... 1030-3
Fuel System ..... 1030-3
Fuel Tank ..... 1030-3
Air Intake System ..... 1030-3
Battery ..... 1030-3
Brakes ..... 1030-3
Gear Increaser ..... 1030-4
Hub Lubricant ..... 1030-4
Hubs and Tires ..... 1030-4
Drive System ..... 1030-4
Hydraulic System ..... 1030-4
Hydraulic Pump Drive ..... 1030-4
Hydraulic Pumps ..... 1030-4
Hydraulic Motors ..... 1030-4
Suspension ..... 1030-5
Steering ..... 1030-5
Turning Radius ..... 1030-5
Wheel Adjustments ..... 1030-5
Travel Speed ..... 1030-5
Cab ..... 1030-5
Air Conditioning System ..... 1030-5
Plumbing System ..... 1030-5
Dimensions ..... 1030-5
Approximate Base Shipping Weights ..... 1030-5
Maximum Operating Weight ..... 1030-6
Engine Oil Selection ..... 1030-6
Engine Oil Viscosity/Temperature Usage Recommendation ..... 1030-6
Engine Coolant Solutions ..... 1030-7
Tire Inflation ..... 1030-8

TOWING ..... SECTION 1040
SPECIAL TORQUE ..... 1040-3
SPECIAL TOOLS ..... 1040-4
PREPARING THE MACHINE FOR TOWING ..... 1040-6
RETURNING TO SERVICE AFTER TOWING ..... 1040-9

ENGINE ..... SECTION 2000
Engine repair information is not contained within this Service Manual. For engine repair, refer to engine service manual 84202702 - 6-Cylinder 6.7L NEF Engine
SPECIAL TORQUES ..... 2000-3
SPECIAL TOOLS ..... 2000-4
ENGINE REMOVAL AND INSTALLATION ..... 2000-5
ENGINE ISOLATOR MOUNT ..... 2000-32

AIR INDUCTION SYSTEM ..... SECTION 2010
ENGINE AIR FILTER ELEMENTS ..... 2010-3
PRIMARY AND SECONDARY FILTERS ..... 2010-4
RESTRICTION INDICATOR SWITCH ..... 2010-8
INTAKE AIR DUCT ..... 2010-10

ELECTRICAL SYSTEM ..... SECTION 4000
SPECIAL TOOLS ..... 4000-3
GENERAL INFORMATION ..... 4000-4
ELECTRICAL SYMBOLS ..... 4000-8
DIAGNOSTICS ..... 4000-9
BASIC TROUBLESHOOTING ..... 4000-10
FUSE AND RELAY IDENTIFICATION ..... 4000-18
INSTRUMENTATION AND CONTROLS ..... 4000-27
CAB BULKHEAD CONNECTOR LOCATIONS ..... 4000-30
GROUND POINTS ..... 4000-34
CONTROLLER/NODE LOCATIONS ..... 4000-36
PROPEL SYSTEM ..... 4000-41
VEHICLE CAN BUS ..... 4000-47
APPLICATION CAN BUS ..... 4000-49
AUTOGUIDANCE CAN BUS (IF EQUIPPED) ..... 4000-50
AUTOFOLD BOOM POSITION SENSORS ..... 4000-51
CHASSIS/CAB CONNECTOR INFORMATION ..... 4000-54
APPLICATION SYSTEM CONNECTOR INFORMATION ..... 4000-101
CHARGING SYSTEM ..... 4000-126
STARTING SYSTEM ..... 4000-130
ENGINE FAULT CODES ..... 4000-136

ELECTRICAL SCHEMATIC POSTER 84242809 ..... IN SERVICE MANUAL BINDER

BATTERY ..... SECTION 4010
SPECIFICATIONS ..... 4010-3
ACCESS TO BATTERIES ..... 4010-4
REMOVAL AND INSTALLATION OF BATTERIES ..... 4010-5
BATTERY MAINTENANCE ..... 4010-6

STEERING HAND PUMP ..... SECTION 5000

CENTER CONSOLE ..... SECTION 5010
SPECIAL TORQUES ..... 5010-3
STEERING COLUMN ..... 5010-4
STEERING COLUMN ASSEMBLY ..... 5010-9

# BOOK 2 - 84258780

HOW TO READ HYDRAULIC SCHEMATICS AND SYMBOLS ..... SECTION 8000
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC ..... 8000-3
SIMPLE SCHEMATIC ..... 8000-19
COMMON SYMBOLS ..... 8000-21

HYDRAULIC SYSTEM TROUBLESHOOTING ..... SECTION 8010
SPECIAL TORQUES ..... 8010-3
HYDRAULIC SYSTEM SPECIFICATIONS ..... 8010-4
DRIVE CIRCUIT ..... 8010-12
HYDROSTATIC PUMPS ..... 8010-14
WHEEL MOTOR ..... 8010-29
NEUTRAL SHUNT VALVE ..... 8010-33
ACTIVE SUSPENSION ..... 8010-33
PARKING BRAKE SYSTEM ..... 8010-34
GEAR PUMP ..... 8010-36
PWM PRODUCT PUMP CONTROL VALVE ..... 8010-40
HYDRAULIC OIL COOLER ..... 8010-47
PRESSURE COMPENSATED PUMP ..... 8010-48
MANIFOLD ..... 8010-49
VALVE BANK (TWO SECTION) ..... 8010-50
BOOM VALVE BANK ..... 8010-53
STEERING ORBIT MOTOR ..... 8010-63
STEERING CYLINDER ..... 8010-63
SERVICE BRAKE ..... 8010-66
BOOM CYLINDERS 90 AND 100 FOOT BOOM ..... 8010-67
BOOM CYLINDERS 120 FOOT BOOM ..... 8010-68

HYDRAULIC TANK, FILTERS AND FLUID ..... SECTION 8020
SPECIAL TOOLS ..... 8020-3
HYDRAULIC FILTERS ..... 8020-4
HYDRAULIC MAINTENANCE SCHEDULE ..... 8020-11
HYDRAULIC TANK DRAINING AND FILLING ..... 8020-12
HYDRAULIC TANK ..... 8020-15

HYDRAULIC PUMPS ..... SECTION 8040
SPECIAL TORQUES ..... 8040-3
GEAR PUMP ..... 8040-5
PRESSURE COMPENSATED PUMP ..... 8040-12
HYDROSTATIC PUMP ..... 8040-16

PRODUCT PUMP - HYDRAULIC MOTOR ..... SECTION 8050
SPECIAL TORQUES ..... 8050-3
PRODUCT PUMP HYDRAULIC MOTOR ..... 8050-4

HYDRAULIC WHEEL MOTOR ..... SECTION 8051
WHEEL MOTOR ..... 8051-3

PUMP DRIVE ..... SECTION 8060
SPECIAL TORQUES ..... 8060-3
PUMP DRIVE ..... 8060-4

HYDRAULIC VALVES ..... SECTION 8070
SPECIAL TORQUES ..... 8070-3
SPECIAL TOOLS ..... 8070-3
PRODUCT PUMP CONTROL (PWM) VALVE ..... 8070-4
NEUTRAL SHUNT VALVE ..... 8070-7
MOTOR CONTROL VALVE ..... 8070-12
PARK BRAKE VALVE ..... 8070-15
TWO SECTION VALVE BANK ..... 8070-20
BOOM VALVE BANK ..... 8070-28
SOLENOID FUNCTION TEST ..... 8070-35
MANIFOLD ..... 8070-36
SERVICE BRAKE VALVE ..... 8070-42

HYDRAULIC CYLINDERS ..... SECTION 8080
SPECIAL TORQUES ..... 8080-3
AXLE ADJUST CYLINDER ..... 8080-4
INNER BOOM FOLD CYLINDER ..... 8080-8
BOOM FOLD OUTER CYLINDER-60 FT. 90 FT. 100 FT. ..... 8080-10
OUTER AND MID BOOM FOLD CYLINDER-12O FT. ..... 8080-12
BOOM HEIGHT CYLINDER ..... 8080-15
BOOM LEVEL CYLINDER ..... 8080-20
LADDER CYLINDER ..... 8080-23
SHOCK ABSORBER/ ACTIVE SUSPENSION CYLINDER ..... 8080-25
STEERING CYLINDER ..... 8080-29
CYLINDER OVERHAUL ..... 8080-32

HYDRAULIC SCHEMATIC POSTER 84242812 ..... IN SERVICE MANUAL BINDER

## BOOK 3 - 84258781

AIR CONDITIONING SYSTEM - TROUBLESHOOTING AND FAULT CODES ..... SECTION 9000
SPECIAL TOOLS ..... 9000-3
A/C THERMAL OPERATION ..... 9000-5
A/C SYSTEM COMPONENTS ..... 9000-7
AUTOMATIC TEMPERATURE CONTROL (ATC) OPERATION ..... 9000-10
ATC FAULT CODES ..... 9000-17
LOCATING SYSTEM PROBLEMS WITHOUT FAULT CODES ..... 9000-26
ATC CONTROLLER TEST (CONNECTOR J8 TEST POINTS) ..... 9000-28
COMPRESSOR AND CLUTCH ..... 9000-32
HIGH AND LOW PRESSURE SWITCH CLUTCH LATCHING CIRCUIT ..... 9000-37
HEATER CONTROL VALVE ..... 9000-41
BLOWER SPEED AND TEMPERATURE CONTROL POTENTIOMETERS ..... 9000-43
BLOWER AND BLOWER SPEED DRIVER ..... 9000-45
CAB AND EVAPORATOR TEMPERATURE SENSORS ..... 9000-47
CONTROLLER POWER, GROUND, AND ATC SWITCH ..... 9000-55
CAB PRESSURIZER BLOWER ..... 9000-58
ACCESSING THE HVAC BOX ..... 9000-59
STANDARD AIR CONDITIONING (STD) TROUBLESHOOTING ..... 9000-60

AIR CONDITIONER SYSTEM SERVICE ..... SECTION 9010
SPECIFICATIONS ..... 9010-3
SPECIAL TORQUES ..... 9010-3
SPECIAL TOOLS ..... 9010-4
AIR CONDITIONER SYSTEM REFRIGERANT RECOVERY ..... 9010-9
RECOVERING PURE 134A REFRIGERANT ..... 9010-11
RECOVERING CONTAMINATED REFRIGERANT WITH OEM1691 ..... 9010-15
AIR CONDITIONER SYSTEM EVACUATION AND RECHARGING ..... 9010-24
AIR CONDITIONING TEMPERATURE/PRESSURE CHART ..... 9010-30
LEAK DETECTION ..... 9010-31
A/C SYSTEM FLUSHING PROCEDURE ..... 9010-41
A/C SYSTEM COMPONENTS ..... 9010-60
A/C COMPRESSOR CLUTCH ..... 9010-65
CONDENSER ..... 9010-76
RECEIVER/DRIER ..... 9010-77
ACCESSING THE HVAC BOX ..... 9010-79
THERMAL EXPANSION VALVE TESTING ..... 9010-81
THERMAL EXPANSION VALVE REPLACEMENT ..... 9010-82
EVAPORATOR AND CAB TEMPERATURE SENSOR LOCATION ..... 9010-84
BLOWER MOTOR REPLACEMENT ..... 9010-85
HEATER CONTROL VALVE REPLACEMENT ..... 9010-86
EVAPORATOR/HEATER ASSEMBLY ..... 9010-87
EVAPORATOR/HEATER ASSEMBLY SEALING AND CLEANING ..... 9010-94
BLOWER AND EVAPORATOR REFERENCE ILLUSTRATION ..... 9010-95
CONTROLLER AND BLOWER SPEED DRIVER REPLACEMENT ..... 9010-96
CAB AIR FILTER SERVICE ..... 9010-99
CAB RECIRCULATION AIR FILTER SERVICE ..... 9010-101
CAB PRESSURIZATION TEST ..... 9010-102
CAB PRESSURIZER MOTOR REPLACEMENT ..... 9010-104

CAB REMOVAL AND INSTALLATION ..... SECTION 9020
SPECIAL TORQUES ..... 9020-3
SPECIAL TOOLS ..... 9020-3
CAB ..... 9020-4

HOODS ..... SECTION 9030
FRONT HOOD ..... 9030-3
ENGINE HOOD ..... 9030-7

RADIATOR, COOLERS AND CONDENSER ..... SECTION 9040
GENERAL INFORMATION ..... 9040-3
COOLING PACKAGE ASSEMBLY CLEANING ..... 9040-4
AIR-TO-AIR COOLER ..... 9040-6
AIR CONDITIONER CONDENSER ..... 9040-12
HYDRAULIC OIL COOLER ..... 9040-14
RADIATOR ASSEMBLY ..... 9040-20

WHEELS, HUBS AND SUSPENSION ..... SECTION 9050
SPECIAL TORQUES ..... 9050-3
RECOMMENDED TOOLS ..... 9050-4
TIRE INFLATION ..... 9050-6
WHEEL ..... 9050-8
PLANETARY GEAR HUB ..... 9050-13
SPRING ..... 9050-17
TRAILING LINK ..... 9050-23
UPPER SUSPENSION ARM ..... 9050-29
STEERING ARM ..... 9050-34

BRAKES ..... SECTION 9060
GENERAL INFORMATION ..... 9060-3
BRAKE CALIPER ..... 9060-4
BRAKE BLEEDING PROCEDURE ..... 9060-11

FRONT AND REAR AXLES AND LINERS ..... SECTION 9070
SPECIAL TORQUES ..... 9070-3
RECOMMENDED TOOLS ..... 9070-3
FRONT AND REAR AXLES AND LINERS ..... 9070-4

BOOMS ..... SECTION 9080
SPECIAL TORQUES ..... 9080-3
BREAKAWAY TIP ..... 9080-4
OUTER BOOM 60, 90 AND 100 FT ..... 9080-13
OUTER BOOM 120 FT. ..... 9080-17
INNER BOOM ..... 9080-22
MID BOOM 120 FT. ..... 9080-30
BOOM 60, 90 AND 100 FT. REMOVAL (CRADLED) ..... 9080-36
CENTER SECTION ..... 9080-43
MAST ..... 9080-52
BOOM PIVOT ..... 9080-56
ASSEMBLED CENTER SECTION AND MAST REMOVAL AND INSTALLATION ..... 9080-61

PRODUCT PUMP ..... SECTION 11020
Product Pump Removal ..... 11020-3
Product Pump Disassembly ..... 11020-6
Product Pump Assembly ..... 11020-8
Product Pump Installation ..... 11020-10

RELOAD STATION ..... SECTION 11030
Removal ..... 11030-3
Installation ..... 11030-6

PRODUCT VALVES ..... SECTION 11040
BOOM SELECTION SHUT OFF VALVE ..... 11040-3
SPARGE VALVE ..... 11040-7

SPRAY BAR AND NOZZLES ..... SECTION 11050
SPRAY NOZZLE ..... 11050-3
SPRAY BAR ..... 11050-7

FOAM MARKER SYSTEM ..... SECTION 11060
FOAM TANK ..... 11060-3
MIXING CHAMBER ..... 11060-6
AIR TANK ..... 11060-7



# Patriot 3230 and 3330 Sprayers

## Service Manual

**Book 1**
General, Engine, Electrical

**84258779**
Issued September, 2009
First Printing

CASE IH AGRICULTURE

# Service Manual Number 84258776

**Book 1 - Publication 84258779**
**General, Engine, Electrical**

For engine repair information, refer to the Engine Service Manual 84202702 for the 6-Cylinder 6.7L NEF Engine.

Book 2 - Publication 84258780
Hydraulics

Book 3 - Publication 84258781
HVAC, Cab, Wheels, Brakes, Boom, Product Handling

Electrical Schematic - 84242809

Hydraulic Schematic- 84242812

You can order Service Manual Books separately (Refer to publication numbers above) or you can order a complete Service Manual (Publication Number 84258776).

# BOOK 1 - 84258779

STANDARD TORQUE SPECIFICATIONS ..... SECTION 1000
TORQUE SPECIFICATIONS - U.S. HARDWARE ..... 1000-3
TORQUE SPECIFICATIONS - METRIC HARDWARE ..... 1000-5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS ..... 1000-7

SAFETY ..... SECTION 1010
PRECAUTIONARY STATEMENTS ..... 1010-3
PERSONAL SAFETY ..... 1010-3
MACHINE SAFETY AND INFORMATION ..... 1010-3
SAFETY RULES ..... 1010-4

LUBRICATION ..... SECTION 1020
SPECIAL TOOLS ..... 1020-3
MAINTENANCE SCHEDULE ..... 1020-7

SPECIFICATIONS ..... SECTION 1030
Diesel Engine ..... 1030-3
Engine Lubrication System ..... 1030-3
Cooling System ..... 1030-3
Fuel System ..... 1030-3
Fuel Tank ..... 1030-3
Air Intake System ..... 1030-3
Battery ..... 1030-3
Brakes ..... 1030-3
Gear Increaser ..... 1030-4
Hub Lubricant ..... 1030-4
Hubs and Tires ..... 1030-4
Drive System ..... 1030-4
Hydraulic System ..... 1030-4
Hydraulic Pump Drive ..... 1030-4
Hydraulic Pumps ..... 1030-4
Hydraulic Motors ..... 1030-4
Suspension ..... 1030-5
Steering ..... 1030-5
Turning Radius ..... 1030-5
Wheel Adjustments ..... 1030-5
Travel Speed ..... 1030-5
Cab ..... 1030-5
Air Conditioning System ..... 1030-5
Plumbing System ..... 1030-5
Dimensions ..... 1030-5
Approximate Base Shipping Weights ..... 1030-5
Maximum Operating Weight ..... 1030-6
Engine Oil Selection ..... 1030-6
Engine Oil Viscosity/Temperature Usage Recommendation ..... 1030-6
Engine Coolant Solutions ..... 1030-7
Tire Inflation ..... 1030-8

TOWING ..... SECTION 1040
SPECIAL TORQUE ..... 1040-3
SPECIAL TOOLS ..... 1040-4
PREPARING THE MACHINE FOR TOWING ..... 1040-6
RETURNING TO SERVICE AFTER TOWING ..... 1040-9

ENGINE ..... SECTION 2000
SPECIAL TORQUES ..... 2000-3
SPECIAL TOOLS ..... 2000-4
ENGINE REMOVAL AND INSTALLATION ..... 2000-5
ENGINE ISOLATOR MOUNT ..... 2000-32

AIR INDUCTION SYSTEM ..... SECTION 2010
ENGINE AIR FILTER ELEMENTS ..... 2010-3
PRIMARY AND SECONDARY FILTERS ..... 2010-4
RESTRICTION INDICATOR SWITCH ..... 2010-8
INTAKE AIR DUCT ..... 2010-10

ELECTRICAL SYSTEM ..... SECTION 4000
SPECIAL TOOLS ..... 4000-3
GENERAL INFORMATION ..... 4000-4
ELECTRICAL SYMBOLS ..... 4000-8
DIAGNOSTICS ..... 4000-9
BASIC TROUBLESHOOTING ..... 4000-10
FUSE AND RELAY IDENTIFICATION ..... 4000-18
INSTRUMENTATION AND CONTROLS ..... 4000-27
CAB BULKHEAD CONNECTOR LOCATIONS ..... 4000-30
GROUND POINTS ..... 4000-34
CONTROLLER/NODE LOCATIONS ..... 4000-36
PROPEL SYSTEM ..... 4000-41
VEHICLE CAN BUS ..... 4000-47
APPLICATION CAN BUS ..... 4000-49
AUTOGUIDANCE CAN BUS (IF EQUIPPED) ..... 4000-50
AUTOFOLD BOOM POSITION SENSORS ..... 4000-51
CHASSIS/CAB CONNECTOR INFORMATION ..... 4000-54
APPLICATION SYSTEM CONNECTOR INFORMATION ..... 4000-101
CHARGING SYSTEM ..... 4000-126
STARTING SYSTEM ..... 4000-130
ENGINE FAULT CODES ..... 4000-136

BATTERY ..... SECTION 4010
SPECIFICATIONS ..... 4010-3
ACCESS TO BATTERIES ..... 4010-4
REMOVAL AND INSTALLATION OF BATTERIES ..... 4010-5
BATTERY MAINTENANCE ..... 4010-6

STEERING HAND PUMP ..... SECTION 5000
Removal ..... 5000-3
Installation ..... 5000-5

CENTER CONSOLE ..... SECTION 5010
SPECIAL TORQUES ..... 5010-3
STEERING COLUMN ..... 5010-4
STEERING COLUMN ASSEMBLY ..... 5010-9

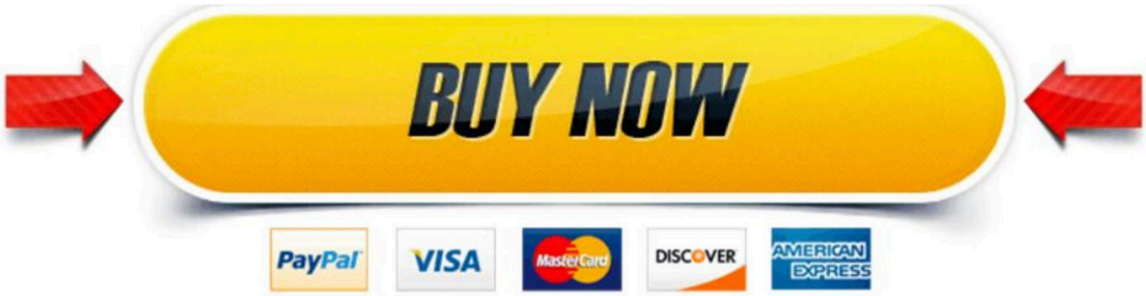
# Section 1000

## STANDARD TORQUE

September, 2009

# TABLE OF CONTENTS

TORQUE SPECIFICATIONS - U.S. HARDWARE ..... 1000-3
U.S. Hardware With A ZND Finish On The Nuts, Bolts And Studs ..... 1000-3
U.S. Hardware With A DOR Finish On The Nuts, Bolts And Studs ..... 1000-4
TORQUE SPECIFICATIONS - METRIC HARDWARE ..... 1000-5
Metric Hardware With A ZND Finish On The Nuts, Bolts And Studs ..... 1000-5
Metric Hardware With A DOR Finish On The Nuts, Bolts And Studs ..... 1000-6
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS ..... 1000-7


BUY NOW
PayPal
VISA
MasterCard
DISCOVER
AMERICAN EXPRESS